



ANDROID TABLET

## User Manual

Please read this manual before operating your device  
and keep it for future reference.



# Legal Notices

---

**Warning:** This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating there to (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit [opensource.samsung.com](https://opensource.samsung.com).

## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

### *Modification of Software*

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

IF YOUR CARRIER PROHIBITS THIS, IF YOU ATTEMPT TO DOWNLOAD SOFTWARE ONTO THE DEVICE WITHOUT AUTHORIZATION, YOU WILL BE NOTIFIED ON THE SCREEN THAT UNAUTHORIZED SOFTWARE HAS BEEN DETECTED. YOU SHOULD THEN POWER DOWN THE DEVICE AND CONTACT YOUR CARRIER TO RESTORE THE DEVICE TO THE CARRIER AUTHORIZED SETTINGS.

### *Diagnostic Software*

This device is equipped with diagnostic software reporting usage and performance information used solely to deliver improved network quality and overall device experience to AT&T customers. Please refer to your AT&T Wireless Customer Agreement and/or the AT&T Privacy Policy ([www.att.com/privacy](http://www.att.com/privacy)) for more information.

### *SAFE™ (Samsung Approved For Enterprise)*

SAFE™: “SAFE™” (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung’s own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung’s SAFE™ program, please refer to [www.samsung.com/us/safe](http://www.samsung.com/us/safe).

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE “SAMSUNG ENTITIES”) EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™

DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to [www.samsung.com/us/safe](http://www.samsung.com/us/safe), available on the web and where Samsung smartphones and mobile devices are sold. [051214]

## **Samsung Telecommunications America (STA), LLC**

### **Headquarters:**

1301 E. Lookout Drive  
Richardson, TX 75082

1-800-SAMSUNG (726-7864)  
1-888-987-HELP (4357)

### **Internet Address**

[www.samsung.com](http://www.samsung.com)

© 2014 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

### *Do you have questions about your Samsung Mobile Device?*

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at [samsung.com/us/support](http://samsung.com/us/support).

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Hangouts, Picasa, Play Newsstand, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your tablet is designed to make it easy for you to access a wide variety of content. For your protection, AT&T wants you to be aware that some applications that you enable may involve the location of your tablet being shared. For applications available through AT&T, AT&T offers privacy controls that let you decide how an application may use the location of your tablet and other devices on your account. However, AT&T's privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected.

Your tablet may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit [www.att.com/privacy](http://www.att.com/privacy).

### *Online Legal Information*

The online version of the Health/Safety and Warranty guide for your device can be found at [www.samsung.com](http://www.samsung.com).

# Table of Contents

---

<b>Getting Started</b> .....	1	<b>WatchON</b> .....	49
Front View.....	2	<b>Settings</b> .....	50
Back View.....	3	Wi-Fi and Wi-Fi Direct.....	51
Assemble Your Device .....	4	Bluetooth .....	53
Set Up Your Device .....	6	Airplane Mode .....	55
Set Up Accounts on Your Device .....	7	Data Usage.....	56
<b>Know Your Device</b> .....	8	Location Services .....	57
Home Screen.....	9	Mobile Networks.....	58
Navigation, Motions, and Gestures .....	12	Virtual Private Networks (VPN) .....	59
Status Bar .....	13	Ethernet Connections.....	60
Notification Panel .....	15	Nearby Devices.....	61
Multi Window .....	16	Printing.....	62
Entering Text .....	18	Screen Mirroring.....	63
<b>Applications</b> .....	20	Sound Settings.....	64
Apps Screen .....	21	Display Settings .....	66
Google Applications .....	23	Wallpaper.....	69
AT&T Applications .....	25	Lock Screen .....	70
Other Applications .....	26	Multi Window .....	72
Camera.....	27	Notification Panel .....	73
Accounts and Contacts .....	30	Toolbox.....	74
Calculator.....	34	Motions.....	75
Calendar.....	35	Accessibility.....	76
Clock.....	36	Blocking Mode .....	78
Email.....	37	Users.....	79
Gallery.....	39	Private Mode.....	80
Internet.....	41	Finger Scanner .....	81
Music Player.....	43	Accounts.....	82
My Files.....	44	Backup and Reset.....	83
S Voice .....	46	Language and Input Settings.....	84
Samsung Apps.....	47	Date and Time Settings .....	87
Video.....	48	Accessories.....	88
		Battery.....	89

Power Saving.....90

Storage.....91

Security.....93

About Your Device .....96

Applications.....97

Default Applications .....99

Applications Settings Shortcuts..... 100

 
# Getting Started

---

*This manual documents default settings. If you select other settings, steps may be different.*

# Front View

---

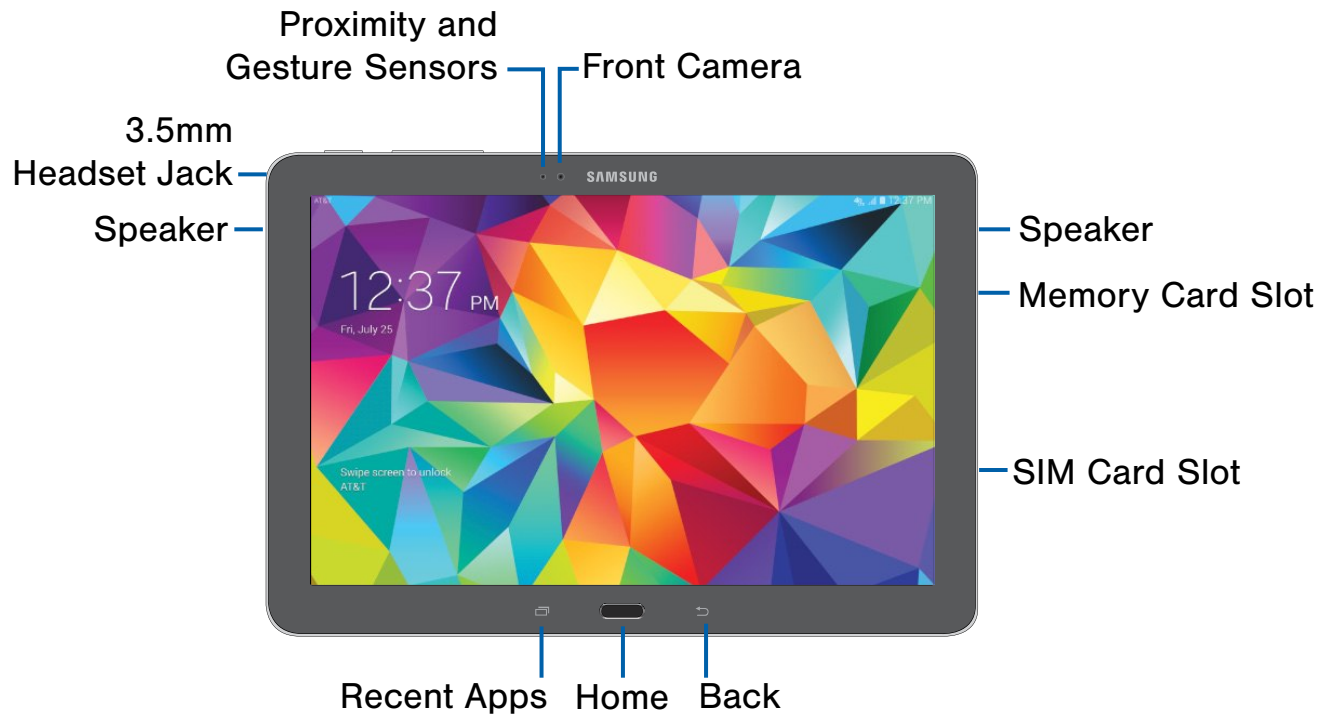


- **3.5 mm Headset Jack:** Connect an optional headset (not included).
- **Back:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Front Camera:** Take pictures and videos of yourself.
- **Home:** Tap to return to the home screen. Activate the Fingerprint security feature to use as a fingerprint reader.
- **Memory Card Slot:** Install a memory card for storage of files.
- **Proximity and Gesture Sensors:** Detects the presence of objects near the device.
- **Recent Apps:** Tap to display recent apps, or touch and hold for home screen options.
- **SIM Card Slot:** Install your SIM card here.
- **Speaker:** Plays music and other sounds.



# Back View

 ---

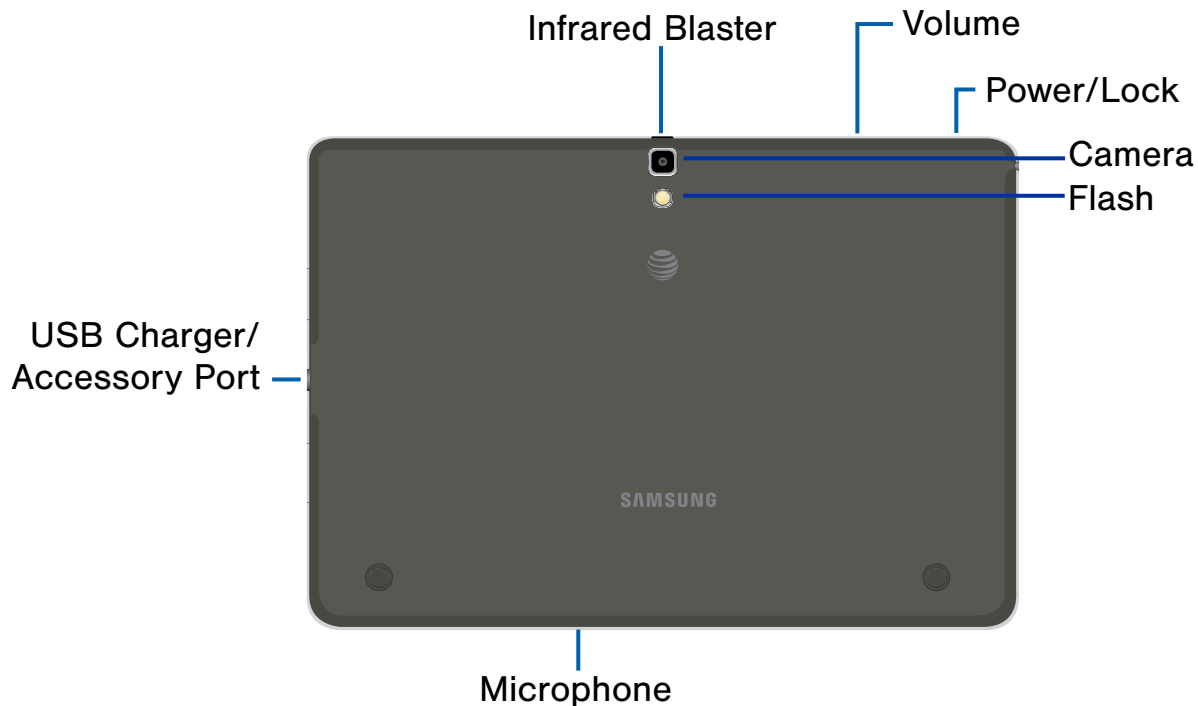

- **Camera:** Take pictures and record videos.
- **Flash:** Illuminate subjects in low-light environments when taking a photo or recording video.
- **Infrared Blaster:** Controls external devices using infrared transmissions.
- **Microphone:** Records audio and detects voice commands.
- **Power/Lock:** Press and hold to turn the device on or off, or press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for easy access to Airplane or Emergency Mode, and to Mute, Vibrate, and Sound modes.
- **USB Charger/Accessory Port:** Connect the Charger/USB cable (included), and other optional accessories (not included).
- **Volume:** Press to adjust the volume of your device's sounds.


# Assemble Your Device

 *Prior to use, it is necessary to install the SIM card and optional memory card (not included), and charge the battery.*

## Install the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card will be loaded with your subscription details, such as your PIN, available optional services, and many other features.

**Warning:** The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

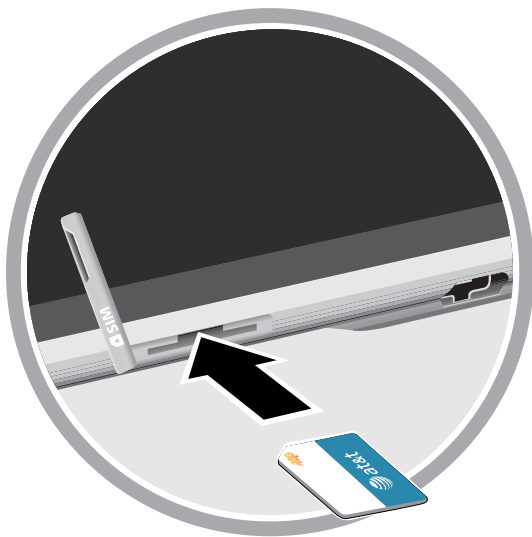

- Carefully slide the SIM card into the SIM card slot until the card locks into place.

Make sure that the card's gold contacts face into the device and that the upper-left angled corner of the card is positioned as shown.

**Caution:** If the card is not inserted correctly, the device will not detect the SIM card. Re-orient the card and place it back into the slot if the SIM is not detected.

## Install a Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

**Note:** A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [Install a Memory Card](#).

 
## Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device, for charging the battery.


The battery comes partially charged. You must fully charge the battery before using your device for the first time. A fully discharged battery requires up to 4 hours of charge time. After the first charge, you can use the device while charging.

**Warning:** Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Your device comes with a charger (charging head and USB cable) to charge your device from any 110/220 VAC outlet.

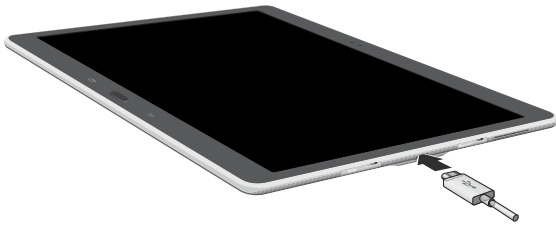

 
1. Insert the USB cable into the port.
2. Connect the USB cable to the charging head, then plug the charging head into a standard AC power outlet.

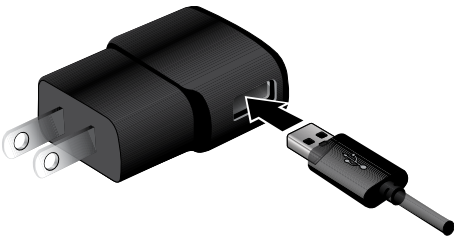

3. When charging is complete, unplug the charging head from the power outlet and remove the USB cable from the device.


**Caution:** Failure to unplug the wall charger before you remove the battery, can cause damage to the device.

## When to Charge the Battery

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power, not by turning off the back light, but by entering the dimming mode.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color () indicates a full charge.

You can also choose to display a percentage value. Having a percentage value onscreen can provide a better idea of the remaining charge on the battery. For more information, see [Battery](#).

# Set Up Your Device

---

## Turn Your Device On and Off

### Turning the Device On

- ▶ Press and hold the **Power/Lock** key until the device vibrates and starts up.

### Turning the Device Off

1. Press and hold the **Power/Lock** key until the device vibrates and the Device Options menu displays.
2. At the prompt, tap **Power off**.

## AT&T Ready2Go

The first time you turn your device on, the AT&T Ready2Go screen displays. It will guide you through the basics of setting up your device.

Follow the **prompts** to choose a default language, set up accounts, choose location services, and learn more about your device.

If you touch **not now > Exit**, you can set up your device later. You can access Ready2Go by tapping

 **Apps >  AT&T Ready2Go.**

## Secure Your Device

Use your device's screen lock features to secure your device. To set a personal screen lock, use the Screen lock option.

### *Lock the Device*

By default, the device locks automatically when the screen times out.

- ▶ Press the **Power/Lock** key.

### *Unlock the Device*

Unlock the device using one of the default unlock screens, or use Screen lock options for increased security.

- ▶ Press the **Power/Lock** key, then touch and drag your finger across the screen.



# Set Up Accounts on Your Device

---

## Google Account

Your new device uses your Google account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play Store. When you turn on your device for the first time, set up a connection with your existing Google account, or create a new Google account.



To create a Google account, or set up your Google account on your device, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Google**.

## Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

To create a Samsung account, or set up your Samsung account on your device, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Samsung account**.

# Know Your Device

---

*This section outlines some key features of your device and describes the screen and icons as they appear when the device is in use.*

*Learn how to navigate the device and how to use special features of this device.*

**Warning:** Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

# Home Screen





- **App Folders:** For your convenience, there are several applications that are grouped into folders on the main Home screen.
- **Apps Screen:** Allows quick access to all of the Applications available.
- **App Shortcuts:** Shortcuts to your favorite applications on the Home screen.
- **My Files:** Launch My Files to quickly create a new folder. For more information, see [My Files](#).
- **Home Screen Indicator:** Indicates which Home screen is presently displayed.
- **Notification Icons:** Displays new messages and emails, notifications, available software updates, and so on.
- **Status Bar:** Display device status icons (right) and notification icons (left).
- **Status Icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widgets:** Self-contained onscreen applications (not shortcuts). These can be placed onto any of the Home screens.

*The Home screen (or Home) is the starting point for using your device.*

*Customize your home screen by adding application shortcuts, widgets, folders, and using wallpapers.*

## Manage Home Screens


Your device comes with multiple home screens by default, and you can add an additional screen. You can also rearrange the home screens in a different order.

1. From a Home screen, pinch the screen.
  - or –
  - Touch and hold an empty space on the screen.
2. Use these options to manage screens:
  - **Add a screen:** Scroll to the end of the screens, and then tap **+** **Add**.
  - **Remove a screen:** Touch and hold on a screen, and then drag it to the  **Remove**.
  - **Set a screen as the main home screen:** Tap  **Main Home Screen** at the top of a screen. This screen displays when you press the Home Key.
  - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.

## App Shortcuts

You can use app shortcuts to launch an app from any home screen.

### Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, and then drag it to a Home screen and release it.

### Remove a Shortcut

1. Touch and hold a shortcut to release it.
2. Drag the icon to the **Remove** icon and then release it.

**Note:** Removing a shortcut does not delete the app, it just removes the shortcut from the home screen.

## Widgets

Widgets are self-contained apps that display on a home screen. Unlike a shortcut, a widget operates right on the home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

### Add a Widget to the Home Screen

1. Touch and hold an empty space on the screen, and then tap **Widgets**.
2. Touch and hold a widget, and then drag it to a home screen and release.

### Remove a Widget

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to the **Remove** icon and release it.



**Note:** Removing a widget does not delete the widget, it just removes the widget from the home screen.



## Folders



Place folders on the Home screen to organize items.

### *Adding Folders*

1. From a Home screen, touch and hold on an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
  - Enter a folder name.
  - Tap  **Add** to place additional apps in the folder.
  - Tap **Done** on the keyboard.

A folder will be created with the shortcut(s) inside.

### *Using Folders*

- Tap the folder to open it and access the shortcuts inside.
- To add shortcuts to the folder, touch and hold the shortcut, and then drag it onto the folder and release.
- To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Remove** and release.
- Tap  **Menu** to change the folder's color scheme.

## Change the Wallpaper

Change the look of the home and lock screens with wallpaper. You can display a favorite picture, or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
  - or –
  - Touch and hold an empty space on the screen.
2. Tap **Wallpapers**, and then choose **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Tap a wallpaper to see a sample, and then tap **Set wallpaper**.

# Navigation, Motions, and Gestures

---

## Touchscreen Navigation

### *Tap*

Lightly tap items to select or launch them.

- Tap the on screen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

### *Touch and Hold*

Activate onscreen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

### *Swipe or Slide*

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Unlock the screen.
- Scroll through the home screen or a menu.

### *Drag*

To drag, touch and hold on an item, and then move it to a new location.

- Add a shortcut to the home screen.
- Move a widget on the home screen.

### *Pinch and Spread*



*Pinch* the screen using your thumb and forefinger, or *spread* by moving your fingers apart.

- Zoom in or out while viewing a picture or a Web page.
- Zoom in or out while taking a picture.

## Motions and Gestures

Control your device by making specific gestures with your hand above the device's screen.

### *Enable Motions and Gestures*

► From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Motions**.

- **Mute/pause:** When on, you can mute incoming calls and pause playback by turning the device screen-side down, or by covering the screen with your hand. You can also use Smart pause, to have the device pause video playback when you look away from the screen.
- **Palm swipe to capture:** When on, you can create a copy of the current screen by swiping the side of your hand across the screen, from left to right or right to left. The screen shot is saved to the clipboard, and to the Screenshots folder.

# Status Bar

*The Status Bar at the top of the home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.*

## Connectivity Icons



Connected to a 4G LTE network.



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Wi-Fi is active.



A Wi-Fi network is available.



Bluetooth is enabled.



Connected to a computer using a USB cable.



Wi-Fi Direct is active.



The Nearby devices setting is enabled.

## Device Status Icons



Battery is fully charged.



Battery is charging.



Battery is Low.



GPS is active.



Vibrate mode is enabled.



Mute mode is enabled.



Error occurred or caution required.

## Messaging Icons



New Gmail has arrived.



New email has arrived.

## Other Icons



Alarm activated



Airplane mode activated



Blocking mode activated



Music is playing.



A song is playing in the Music app.



When the keyboard is being displayed, touch this icon to display a menu of quick keyboard settings.



A screenshot has been captured.

 


This is a notification for one or more events.



Private mode is enabled. For more information, see [Private Mode](#).


# Notification Panel

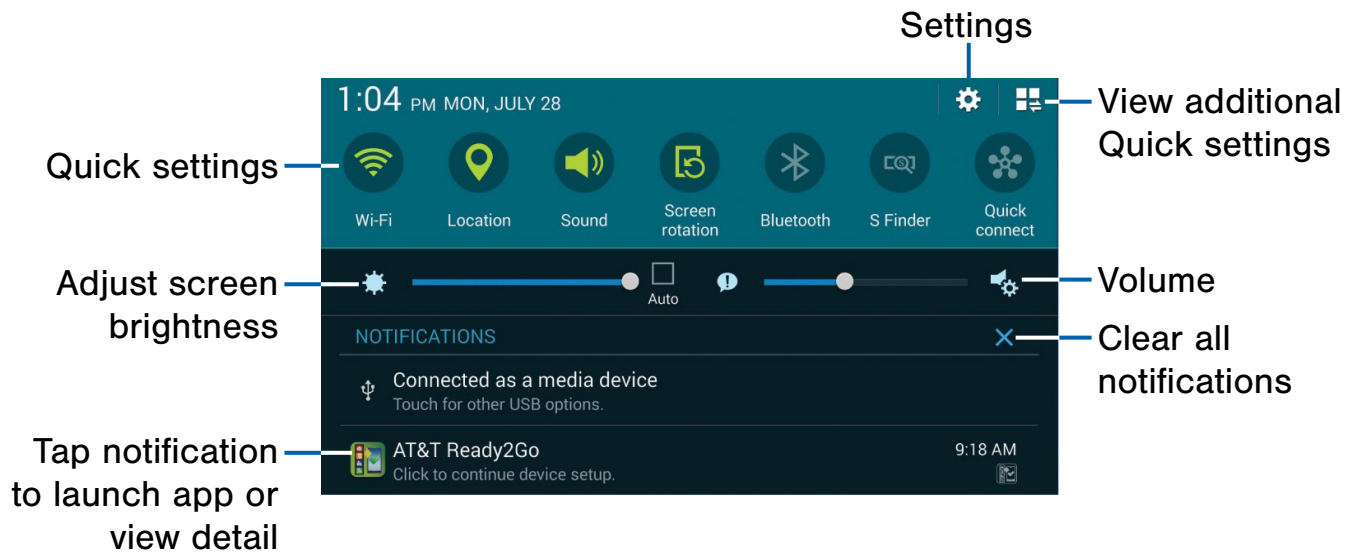

*Notification icons display on the Status Bar displaying calendar events, device status, and more. For details about these notifications, open the Notification Panel.*

## Quick Settings



In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

- To view additional Quick settings, tap  **View all**.

 
## Notification Panel Settings

To customize the Notification Panel, see [Notification Panel](#).

## View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
  - Tap an item to open it.
  - To clear a single notification, drag the notification left or right. Tap  **Clear all** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or tap  **Back**.

# Multi Window

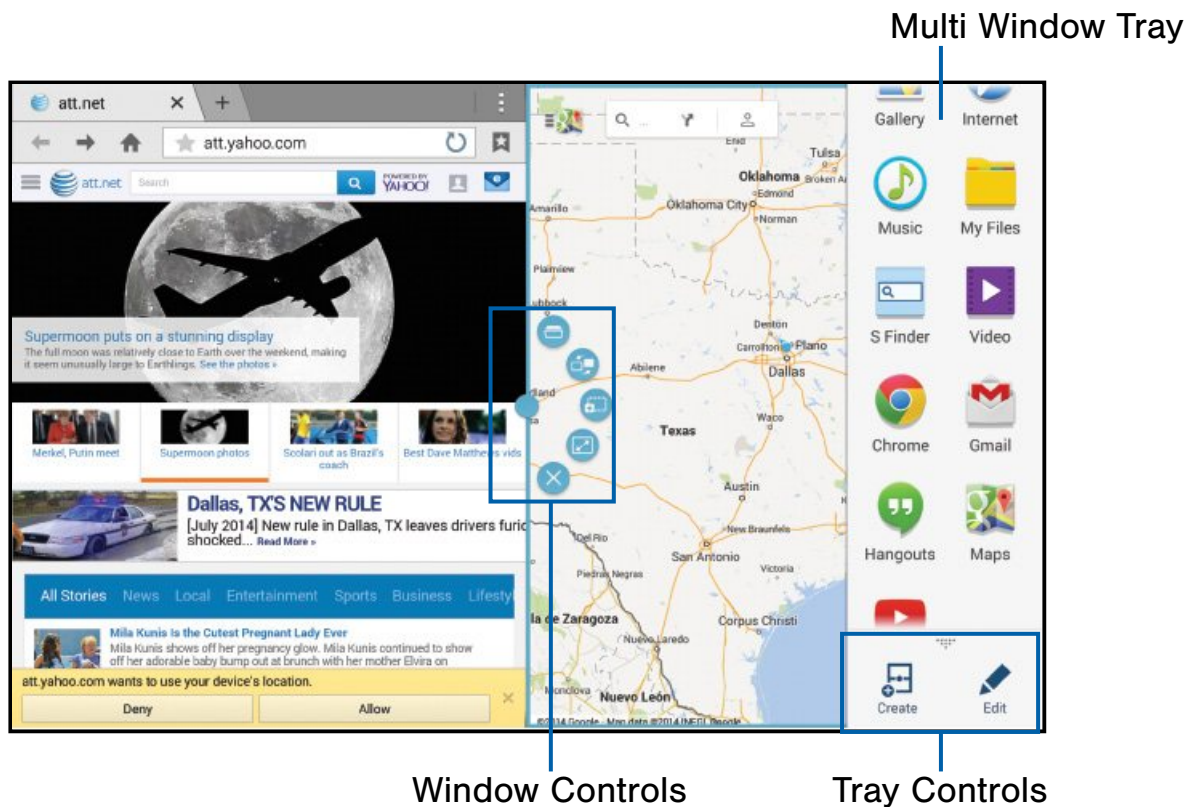

*Multi task by using multiple applications at the same time.*

## Activate Multi Window

1. From a Home screen, tap **Apps** > **Settings** > **Device** tab > **Multi window**.
2. Tap **ON/OFF** to activate.
  - Tap **Open in multi window view** to automatically view content in Multi window when you open files from My Files or Video player, or attachments from email.

**Tip:** You can also activate Multi window from the Notification Panel.

## Using Multi Window


After enabling Multi Window, you can use it to run multiple apps at the same time.

**Note:** Only apps located on the Multi Window tray can be used together. Additional Multi Window apps are available from the Google Play Store.






The apps display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.

1. Swipe the right edge of the screen toward the center to display the Multi window panel. After a few seconds, the panel will be hidden again.
2. Tap the Multi window tab to display the tray, and then drag apps to the windows.

## Window Controls

Select an application window and tap  in the middle of the windows.

### Window Controls

-  Open a recently-used application in the selected window.
-  Switch locations between Multi window applications.
-  Share items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.
-  Maximize the application.
-  Close the application.



## Customize Multi Window

You can customize Multi window to suit your preferences.

### Create a Window Group

If you like to use two apps together in Multi window often, you can create a window group to quickly display the two apps in Multi window.

The window group will be stored in the Multi window tray, so you can choose it any time to display the two apps.



1. Tap the Multi window tab to display the tray, and then drag apps to the windows.
2. Scroll to the bottom of the Multi window tray, and then tap  **Panel Controls** >  **Create**.

### Change the Order of Apps in the Multi Window Tray



1. Tap the Multi window tab to display the tray.
2. Tap and hold an app, drag it to a new position in the tray and then drop it.

### Choose Apps to Display in the Multi Window Tray

You can choose the apps you want to display in the Multi window tray.

1. Tap the Multi window tab to display the tray.
2. Tap  **Panel Controls** >  **Edit** for options:
  - To remove an app from the panel, tap and drag it off of the panel and place it in the storage area.
  - To add an app to the panel, tap and drag it from the storage area to the panel.
  - To relocate an app, tap and drag it to a new location.

## Multi Window Settings

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Multi window** for options:
  - Tap **Open in multi window view** to automatically view content in a multi window when you open files from My Files or Video, or attachments from email and messages.

# Entering Text

## Using the Samsung Keyboard

Type your text input using a QWERTY keyboard.  
Predicted text suggests words based on your typing.

### Predictive Text



### *Configure the Samsung Keyboard*

To customize the Samsung Keyboard, see [Samsung Keyboard Settings](#).

## Special Keys



Tap once to use Google Voice Typing.

Touch and hold to access keyboard settings and advanced keyboard features, such as handwriting.



Enter text using Google Voice Typing.



Use your handwriting to enter text.



Display the contents of the clipboard.



Access keyboard settings.



Change the layout of the keyboard.

## Ctrl

Tap with key for quick access to cut (x), copy (c), paste (v), undo (z), redo (y), and select all (a).

 
## Sym


Tap to insert common symbols.



## Using Google Voice Typing

Instead of typing, speak your text input.

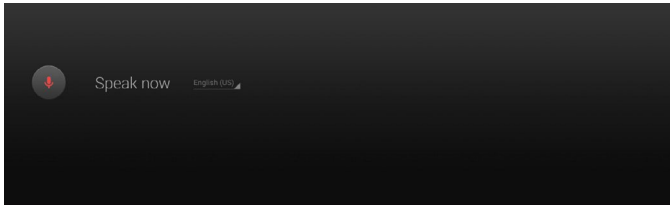

1. On the Samsung Keyboard, tap  **Google Voice Typing**.
2. Speak your text.

### *Configure Google Voice Typing*

To customize Google Voice Typing, see [Google Voice Typing Settings](#).

## Using Swype

Swype is a text input method that makes it possible to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words.

### *Enabling and Configuring Swype*

To enable the Swype keyboard while entering text:

1. Touch the top of the screen and swipe downward to display the Notification Panel.
2. Touch **Select input method**.
3. Touch **Swype**.

### *Configure Swype*

To customize Swype, see [Swype Keyboard Settings](#).

# Applications

---

*The Apps screen displays all applications installed on your device, including apps you download and install.*



*From Apps, you can change the way apps appear on the screen, and uninstall/disable apps you have downloaded.*

# Apps Screen

The Apps screen contains preloaded apps, plus apps you have downloaded. You can uninstall or disable apps, or hide them from view.



Shortcuts to app can be placed on any of the Home screens. For more information, see [Add a Shortcut to a Home Screen](#).

## Accessing Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press  **Home**.



## Download and Install New Apps

Find new apps to download and install on your device:

-  **Google Play Store:** Download new apps from the Google Play Store. Visit [play.google.com/store/apps](https://play.google.com/store/apps) to learn more.
-  **Samsung Apps:** Download apps specifically designed for your Samsung device. Visit [apps.samsung.com](https://apps.samsung.com) to learn more.





## View Your Downloaded Apps

You can view all of the apps you have downloaded and installed on your device.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options > Downloaded applications**.



## Uninstall or Disable Apps

You can uninstall or disable apps you download and install. Pre-loaded apps cannot be uninstalled.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options > Uninstall/disable apps**. Apps that can be uninstalled show  **Delete** on their icon.
3. Tap  **Delete**, and then follow the prompts to uninstall the app.

### *View Disabled Apps*



You can place disabled apps back on the Apps screen, where they became active once again.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options > Show disabled apps**.
3. Tap each app you want to enable, and then tap **Done**.





## Organize Your Apps

The Apps icons can be listed alphabetically or in your own custom order. You can also organize apps in folders.

### *Change the Order Apps Are Listed*



1. From a Home screen, tap  **Apps**.
2. Tap  **More options > View type**.
3. Tap an option:
  - **Customizable grid:** The default view, which allows you to touch and hold on apps to move them from screen to screen.
  - **Alphabetical grid:** Icons are arranged in a grid, in A-Z order.

## Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Create folder**.
3. Enter a folder name.
4. Tap , select apps to include in the folder, and then tap **Done**.
  - Touch the folder to view its apps. Touch an app to launch it.
  - Touch  to select a background color for the folder.



## Hide Apps from View

You can hide (rather than uninstall or disable) any apps you do not want to see on the App screen.




1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Hide apps**.
3. Tap apps to hide, and then tap **Done**.

## Show Hidden Apps

You can view apps you have hidden and put them back on the App screen.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Show hidden apps**.
3. Tap apps to unhide, and then tap **Done**.

## Apps Screen Options

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** for these options:
  - **Edit**: Touch and hold an app icon then drag it to **Create folder** to create a new folder. Drag it to **App info** to view information about this app. Or drag it to **Disable** or **Delete** to remove the app
  - **Create folder**: Create a new folder to hold the app icon.
  - **View type**: Configure the apps screen.
  - **Download applications**: View downloaded apps. Touch an icon on the Downloaded applications screen to launch the application.
  - **Uninstall/disable apps**: Remove an app that you downloaded to your device. Preloaded apps cannot be uninstalled. Touch  **Delete** to remove the selected app.
  - **Hide apps**: Hide apps from the Apps screen.
  - **Show disabled apps**: Display disabled apps.
  - **Show hidden apps**: Display hidden apps.
  - **GALAXY Essentials**: Download GALAXY Essential apps specially chosen for your device.

# Google Applications

---



## Chrome

Use Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your tablet.

Visit [google.com/chrome/browser](http://google.com/chrome/browser) to learn more.



## Drive

Open, view, rename, and share your Google Docs and files.

Visit [drive.google.com](http://drive.google.com) to learn more.



## Gmail

Send and receive email with Gmail, Google's web-based email.

Visit [gmail.com](http://gmail.com) to learn more.



## Google


Search not only the Internet, but also applications and their contents on the device as well.

### Google Now

Google Now recognizes repeated actions performed on the device to automatically send user-specific information "cards."

Visit [google.com/landing/now](http://google.com/landing/now) to learn more.

► Press and hold **Home**.

**Note:** When Google Now is enabled, you can also access it by touching .



## Google Settings

Quickly and easily change Google app settings to suit your preferences.

**Note:** You must be signed in to the application in which you want to configure. (For example, sign in to Google+ in order to configure Google+ settings.)



## Google+

Stay connected and share life as it happens with Google+. Chat with friends and family, post photos, or see what others are sharing while you are on the go.

Visit [google.com/mobile/+](http://google.com/mobile/+) to learn more.



## Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

Visit [google.com/hangouts](http://google.com/hangouts) to learn more.



## Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Visit [google.com/maps](http://google.com/maps) to learn more.

**Note:** You must enable location services to use Maps. For more information, see [Location Services](#).



## Photos

Automatically save every photo you take with your device to your Google+ account. Then it is easy to view, organize, and share them with friends and family of your choice.

Visit [google.com/+/learnmore/photos](http://google.com/+/learnmore/photos) to learn more.



## Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

Visit [play.google.com/store/books](http://play.google.com/store/books) to learn more.



## Play Games

Discover hundreds of games for download and purchase through the Google Play Store.

Visit [play.google.com/store](http://play.google.com/store) to learn more.



## Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you're not connected to the Internet. You can also view videos saved on your device.

Visit [play.google.com/about/movies](http://play.google.com/about/movies) to learn more.



## Play Music

With Google Play Music, you can play music you've downloaded, and music you copied from your computer.

Visit [play.google.com/about/music](http://play.google.com/about/music) to learn more.



## Play Newsstand

Subscribe to your favorite magazines so you can have them available to read on your device at your leisure.

Visit [play.google.com/store/newsstand](http://play.google.com/store/newsstand) to learn more.



## Play Store

All your favorite apps, movies and TV shows, music, books, magazines, and games are available in Google Play Store.

Visit [play.google.com/store](http://play.google.com/store) to learn more.



## Voice Search

Use voice commands to search the web with Google.



## YouTube

View and upload YouTube videos, right from your device.

Visit [youtube.com](http://youtube.com) to learn more.

# AT&T Applications

---



## AT&T AllAccess

AT&T AllAccess is the easy-to-use, all-in-one tool that helps you view and manage your data plan.

Your Data plan and Data Usage is displayed. You can manage your account, view your bill, and contact customer support.



## AT&T FamilyMap

AT&T FamilyMap provides peace of mind by being able to conveniently locate a family member from your wireless device or PC and know that your family's location information is secure and private.

FamilyMap requires a paid subscription. To sign up for service, visit [www.att.com/familymap](http://www.att.com/familymap) for more information or contact your AT&T Customer Service Representative.



## AT&T Locker

AT&T Locker allows you to store, share, and sync all of your photos, videos, and documents in one safe, convenient place: the AT&T cloud.



## AT&T Mail

Instantly get your mail anytime, anywhere. Read, respond to, and organize your messages quickly, whether you are at home or on the go.



## AT&T Ready2Go

AT&T Ready2Go allows you to quickly and easily setup your device by using the web browser on your PC. You can set-up email accounts, import contacts, set wallpaper, configure Wi-Fi and many more features.



## Device Help

Device Help provides online information to help with your device questions.



## Messages

With AT&T Messages you can send and receive text and picture messages from your tablet or computer. Your messages are stored in the network so you can continue the conversation even when you switch devices. AT&T Messages uses your AT&T mobile number, so whether you send messages from a phone, tablet, or computer, everyone will know the message is from you.



## myAT&T

Use myAT&T to manage your own AT&T account. You can review and pay your bill, check minutes and data usage, upgrade to a new device, or change your rate plan.

# Other Applications

---



## Amazon Kindle

Use the Amazon Kindle application to download books for reading right on your device. You must have an account with Amazon to use the Kindle application.

Visit [Amazon.com](http://Amazon.com) to learn more.



## Flipboard

Use this application to access your personalized magazines.

Visit [flipboard.com](http://flipboard.com) to learn more.



## For Kids!

Famigo creates a safe and fun mobile environment for your kids by blocking ads, social networking, and unsafe apps. Famigo also provides recommendations for kid-safe apps and content.



## Games

Play full version games for free. Use WildCoins to rent or buy games and in-game items. Enjoy new games every week.

Visit [wildtangent.com/GamesApp](http://wildtangent.com/GamesApp) to learn more.



## Hancom Office Viewer

Opens and manages Hancom Office Hanword (\*.hwp) and Hanshow (\*.show) documents.

Visit [hancom.com](http://hancom.com) to learn more.



## Keeper

Keeper is a secure password manager for your device and works seamlessly across your mobile phones, tablets, computers, and web browsers.



## Paper Garden

Paper Garden is an interactive digital magazine service that offers a seamless user experience with a wide variety of premium global magazines. Paper Garden delivers highly interactive, high resolution magazine content that fits perfectly on Samsung Tablet screens.



## Remote PC

Remotely access and control your computer via the Internet.

Visit [remotepc.rview.com](http://remotepc.rview.com) to learn more.



## SideSync 3.0

SideSync is a PC-Mobile solution that enables the screens, windows, and data to be shared easily between a PC and Samsung Android Device.



 
## YP

The Yellow Pages Mobile application provides quick and ready access to businesses, map locations, and storage of your favorite searches. Use YP to touch into local businesses, locations, and events, and connect to your search in real-time.

Visit [yellowpages.com/products](http://yellowpages.com/products) to learn more.



# Camera

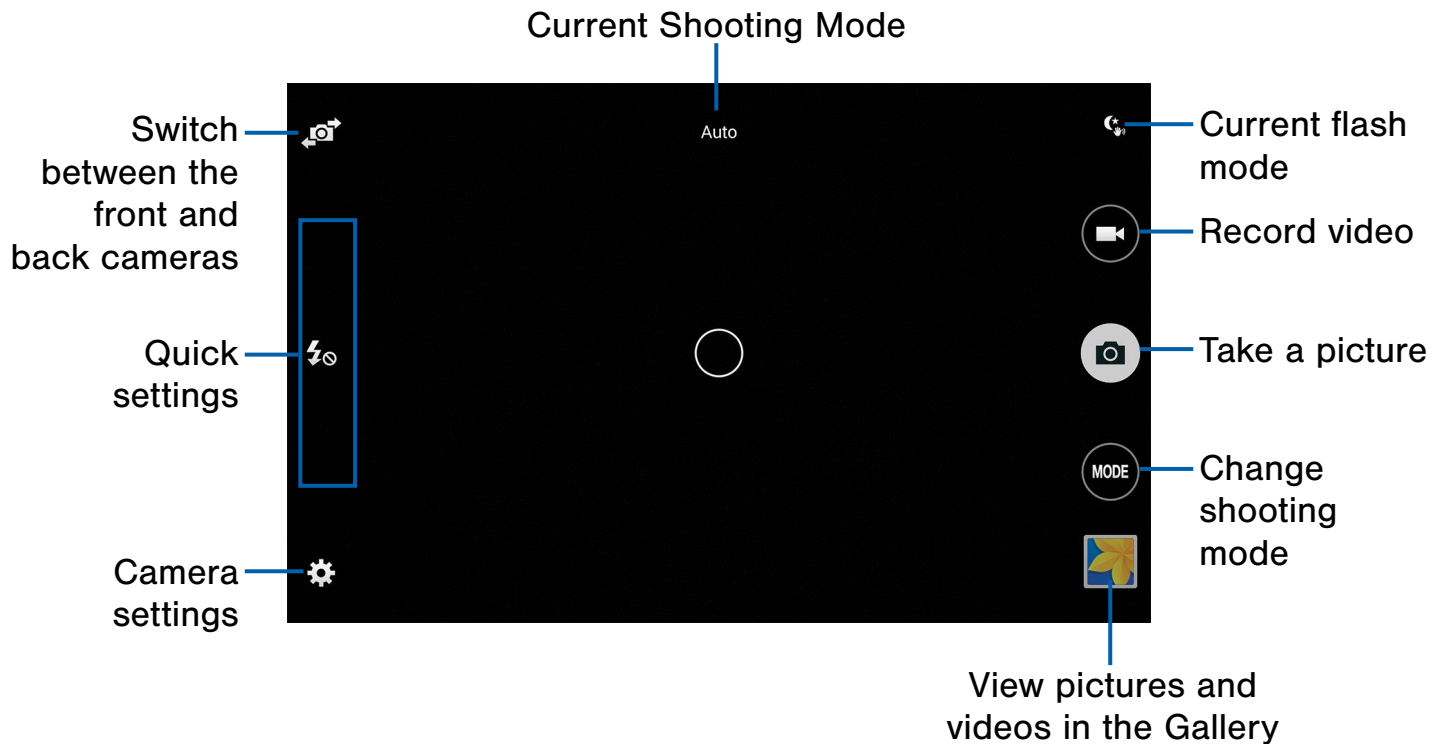

*Use your device's built-in camera and camcorder to take photos and record videos.*

## To access the Camera:

1. From a Home screen, tap **Camera**.  
– or –  
From a Home screen, tap **Apps** > **Camera**.  
If a memory card is inserted, the Storage location pop-up displays.
2. Tap **OK** to change the storage location to memory card for storing photos and videos. Touch **Cancel** to use the device storage.  
The Camera screen displays.




## Taking Photos

Take photos with your device's front or back camera, or combine shots with Dual mode.




1. From a Home screen, tap **Apps** > **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your photo, use the onscreen options or these gestures:
  - Press the **Volume key** up or down to zoom in or out, or tap the screen with two fingers and pinch or spread them on the screen to zoom.
  - Tap the screen to focus on the area you tapped.
3. Tap to take the photo.

## Shooting Mode

Several photo effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **MODE** and select a shooting mode:
  - **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the photo.
  - **Beauty face**: Take a photo with lightened faces for gentler images.
  - **Shot & more**: Take a quick burst of photos and apply effects to them.
  - **Panorama**: Take a photo composed of many photos strung together.
  - **HDR (Rich tone)**: Take photos without losing details in bright and dark areas.
  - **Dual camera**: Take photos and record videos using the front and rear cameras at the same time. A variety of picture-in-picture styles are available.
  - **Manage modes**: Select which shooting modes to display when you tap Modes
  - **Download**: Download additional shooting modes from the Samsung Apps store.

## Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Settings** to configure settings for Camera. Not all of the following options are available in both still camera and video camera modes. The available options vary depending on the mode used.

### Camera

- **Picture size**: Select a resolution. Use higher resolution for higher quality. Higher resolution photos take up more memory.
- **Burst shots**: Take a series of photos of moving subjects.
- **Picture stabilization**: Activate or deactivate anti-shake. Anti-shake helps focus when the camera is moving.
- **Face detection**: Set the device to recognize people's faces and help you take photos of them.
- **ISO**: Select an ISO value. This controls camera light sensitivity. It is measured in film-camera equivalents. Low values are for stationary or brightly-lit objects. Higher values are for fast-moving or poorly-lit objects.
- **Metering modes**: Select a metering method. This determines how light values are calculated. Center-weighted measures background light in the center of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.
- **Tap to take pics**: Tap anywhere on the screen to take a photo.
- **Save as**: Set the device to delete the original photo when taking photos with rich tone mode.

## Video Recorder

- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Recording mode:** Select Normal, Limit for email, or Fast motion mode.
- **Video stabilization:** Activate or deactivate anti-shake. Anti-shake helps focus when the camera is moving.

## General

- **Effects:** Access to pre-installed and downloaded effects.
- **Flash:** Activate or deactivate the flash.
- **Timer:** Take time-delayed photos or videos.
- **Location tags:** Attach a GPS location tag to the photo.
- **Storage location:** Select the memory location for storage.
- **Review pics/videos:** Set to show photos or videos after taking them.
- **Remote viewfinder:** Take photos using the viewfinder of a connected device. Wi-Fi Direct is required.
- **White balance:** Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Exposure value:** Change the exposure value. This determines how much light the camera's sensor receives. For low light situations, use a higher exposure.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Shutter sound:** Turn the shutter sound on or off.
- **Volume key:** Assign a function to the volume key. Choose from Take photos, Record video, or Zoom.
- **Voice control:** Set the camera to take photos with voice commands.
- **Reset settings:** Reset the camera settings.



# Accounts and Contacts

*Your device provides the ability to synchronize information, from a variety of accounts, including Google, Email, Facebook, and your Samsung account.*



Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

## Accounts

### *Adding an Account*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** > **Accounts** > **Add account**.
2. Select an account provider and follow the prompts to enter your credentials and sign in.



### *Managing Accounts*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** > **Accounts**.
2. Select an account, and then tap a setting to enable synchronization.

## Contacts



The Contacts app lets you store and manage contacts from a variety of sources, including contacts you enter and save directly on your device as well as contacts synchronized with your Google account, compatible email programs (including Microsoft Exchange Server), and your Facebook friends.

### *Accessing Contacts*

- From a Home screen, tap  **Apps** >  **Contacts**.






### *Finding a Contact*




You can search for a contact, or scroll the list to find one by name.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.
3. Tap a letter on the side of the list to go directly to that letter in the alphabetical list.

### *Adding a Contact*

Use the following procedure to add a new contact.




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
  - Choose a storage account for the contact. You can choose **Device**, **SIM**, or choose an account.
  - Tap  **Photo** to assign a picture to the new contact.
  - Tap the **Name** field to use the onscreen keyboard to enter the full name. Tap  **Expand** for additional name fields.

- Tap the **Phone** number field, and then enter the phone number. Tap  to add another phone number. Tap  to choose a label for the number.
- Tap  beside Email to enter an email address. If you add more than one email address, you will be prompted to choose a default email address.
- Tap **Groups** to assign the contact to a group.
- Tap the **storage location** field to change where the contact is stored.
- Tap **Add another field** to store additional contact information.

3. Tap **Save** to save the new contact.




### *Edit a Contact*

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.


### *Share a Name Card*

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **More options** > **Share name card via**.
3. Choose a sharing method and follow the prompts.




### *Save a Business Card as a Contact*

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Business cards** >  **Add**.
3. When the camera opens, center the business card in the guidelines on the screen. If the Camera can recognize the business card, it will take the picture automatically, or you can take the picture manually.
4. Your device analyzes the picture of the business card, and uses information it recognizes to create a new contact. You can also add more information to the contact.
5. Tap **Save**. The business card is displayed as the picture for the contact.




 
**Note:** You can view all your business cards by tapping  **More options** > **Business cards**.

### *Link Contacts*

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Your device's Contacts application lets you link multiple entries into a single contact.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap **Link another contact**, and then select contact(s) to link to the original contact.

### *Unlink Contacts*

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap  beside contacts to unlink them from the main contact.

## Delete Contacts





You can delete a single contact or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold on a contact to select it. You can also tap other contacts or tap  > **Select all** to select all contacts.
3. Tap  **Delete**, and then tap **OK** to confirm.




## Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

### Mark Contacts as Favorites




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (turns bright ).

### Remove Contacts from Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab.
3. Touch and hold on a contact to select it. You can also tap other contacts or tap  > **Select all** to select all contacts.
4. Tap **Remove from Favorites**.

### Create a Shortcut to a Favorite




You can create a shortcut to a favorite on the Home screen, to access Contact information directly from the Home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold on a contact to select it.
3. Tap  **More options** > **Add shortcut to home**. The new shortcut displays in an empty area of the Home screen.




## Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.




### Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap  **Create**.
3. Tap fields to enter information about the group:
  - Tap **Create group in All Accounts** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts.
  - Tap **Group name** to enter a name for the new group.
  - Tap **Add member** and select contact(s) to add to the new group, and then tap **Done**.
4. Tap **Save**.

### Rename a Group





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **More options** > **Edit group** and enter a new name.
4. Tap **Save**.

### Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **More options** > **Add member**, and then tap the contact(s) you want to add.
4. Tap **Done**.

## Send an Email to a Group

You can send an email to members of a group.




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **More options** > **Send email**.
4. Tap contacts to select them, or tap  > **Select all**, and then tap **Done**.

**Tip:** You will only see group members that have email addresses in their contact records.

5. Choose an account and follow the prompts.




## Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab.
3. Tap  **More options** > **Delete groups**.
4. Select groups to delete and tap **Done**. Choose from **Group only** or **Group and group members**.

## Contact Settings

These settings allow you to modify settings associated with using the Contacts app.



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Calculator

---

*The Calculator provides basic and advanced arithmetic functions.*

## Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the = (equals) key.

## Additional Functions

To clear the results:

- ▶ Tap  **Clear**.

To clear the calculator history

- ▶ Tap  **Clear history**.

To copy all or part of the calculation to the clipboard:

- ▶ Touch and hold an entry in the display field.

## Scientific Calculator

Turn the device landscape to use advanced arithmetic functions, such as *sin*, *cos*, and *tan*.






# Calendar





---

*Manage your events and tasks.*




## Create an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Create new** and use one of the following methods:
  - **Event:** Enter an event with an optional repeat setting.
  - **Task:** Enter a task with an optional priority setting.
3. Enter details for the event or task, and then tap **Done**.

## Delete an Event or Tasks




1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task. Tap  **More options** > **Delete**.  
- or -  
To delete multiple events or tasks, tap  **More options** > **Delete**, select events or tasks, and then tap **Done**.

## Sharing Events

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task. Tap  **More options** > **Share via**, select a sharing method, and follow the prompts.

## Calendar Settings



These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Clock




---

*The Clock app offers features for keeping track of time and setting alarms.*

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
  - **Alarm:** Use this feature to set an alarm to ring at a specific time.
  - **World clock:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.

## Create an Alarm




Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap  **Create** to configure:
  - **Time:** Choose a time for the alarm.
  - **Days:** Choose the days to use this alarm.
  - **Repeat weekly:** When enabled, the alarm repeats every week.

- **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
- **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
- **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.
- **Snooze:** Enable the snooze feature, and then set the Interval and Repeat settings.
- **Smart alarm:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Choose a time interval and a tone to use with smart alarm. Available when you have chosen an alarm type that includes sound. Also, set the Interval and Tone.
- **Name:** Enter a name for the alarm.

3. Tap **Save**.



## Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Touch and hold an alarm, and then tap  **Delete**.

# Email




*Use the Email app to view and manage all your email accounts in one application.*

## To access Email:

- ▶ From the Home screen, tap  **Apps** >  **Email**.

## Configuring Email Accounts


You can configure Email for most accounts in just a few steps.

1. From a Home screen, tap  **Apps** >  **Email**.
2. The first time you set up an email account, at the Set up account screen, enter an **Email address** and **Password**, then tap **Next**.  
  
- or -  
  
For additional accounts, tap  **More options** > **Settings** > **Add account**.
3. Follow the onscreen instructions to set up your email account.
4. Tap **Next** to go to the next screen or tap **Previous** to go to the previous screen.

**Note:** For Exchange ActiveSync accounts, the *Activate device administrator?* screen may appear. Read the information and tap **Activate** to continue.

5. Enter an account name and Your name, if required.
6. Tap **Done**.




The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

**Note:** To configure email account settings at any time, tap  **More options** > **Settings**. Tap the account to display Account settings.

## Managing Your Email Accounts




You can view email you receive for all accounts in the **Combined view** screen or you can view email accounts individually.

If you have set up more than one email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap the  drop-down menu at the top left of the screen to select:
  - **Combined view:** View all email in a combined inbox.
  - **<Account Name>:** View email for the account.




## Refreshing Your Email Account

Refresh your account to update your device from the Email servers.






1. From a Home screen, tap  **Apps** >  **Email**.
2. In the Application Bar, tap  **Refresh**.


## Deleting Email Accounts

To delete an Email account:


1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings**.
3. Tap the account you want to delete and then tap **Delete account**.

## Composing and Sending Email

1. From a Home screen, tap  **Apps** >  **Email**.
2. If you have multiple accounts set up, choose an account from the menu at the top of the screen.
3. Tap  **Compose**, then tap fields to enter recipients and the email text.
4. While composing a message:
  - Tap  **More options** to Schedule sending or set Priority and Security options, and so on.
  - Tap  **Attach** to add a file to the message.

Available options depend on the type of email account.
5. Tap the body of the email to enter the text of your email. Tap the text option buttons to edit and format your message text.
6. Tap  **Send** to send the message.




- or -

Tap  **Save** to save the email to the Drafts folder.

## Email Settings

Use the Email Settings to configure your Email preferences.

**Note:** Available settings depend on the email provider.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings**, then tap **General settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap an account to configure specific settings.

Available options depend on the account.

# Gallery








---

*View, edit, and manage pictures and videos.*

## Viewing Images

Launching Gallery displays available folders. When another application, such as Email, saves an image, the Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.

### To access Gallery:



1. From a Home screen, tap  **Gallery**.  
– or –  
From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  and then tap **Time** or **Album** to choose the way items display.
3. Tap  > **Albums** and then tap  **More options** > **Create album** to create a new album.
4. Tap  **Camera** to launch the Camera app.
5. Tap a folder to open it.
  - Tap an image or video to view it in full screen. Scroll left or right to view the next or previous image.

## Zooming In and Out


Use one of the following methods to zoom in or out on an image:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.


## Playing Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. Tap a video to view it.

## Trimming Segments of a Video




1. Select a video, and then tap  **Trim**.
2. Use the sliders at the bottom of the screen to trim the video. Move the start bracket to the desired starting point, move the end bracket to the desired ending point, and then tap **Done** to save the video.

## Editing Images

► While viewing an image, tap  **More options** for the following functions:

- **Edit:** Use basic tools to edit your photo.
- **More info:** View image details.
- **Copy to clipboard:** Place a copy on the clipboard.
- **Studio:** Edit your photo with advanced tools.
- **Rotate left:** Rotate counter-clockwise.
- **Rotate right:** Rotate clockwise.
- **Crop:** Resize the frame to crop and save the image in it.
- **Rename:** Rename the file.
- **Slideshow:** Start a slideshow with the images in the current folder.
- **Set as:** Set the image as wallpaper or a contact image.
- **Print:** Print the image via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
- **Settings:** Change the Gallery settings.

## Deleting Images

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **More options** > **Delete**, select images, and then tap **Done**.





– or –

When viewing an image full screen, tap


 **Delete**.

## Sharing Images

Use one of the following methods:





1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **More options** > **Select**, select images, and then tap  **Share via** to send them to others or share them via social network services.

– or –

When viewing an image full screen, tap  **Share via** to send it to others or share it via social network services.

## Gallery Settings

These settings allow you to modify settings associated with using your Gallery.



1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap  **More options** > **Add account** to add a Samsung, Google, or Facebook account.

# Internet

---






*Access the Internet with a fully featured web browser.*

## Access the Internet

- ▶ From a Home screen, tap  **Apps** >  **Internet**.

## Command Keys

The following command keys are available:

-  **Back** or  **Back** key to return to the previous page.
-  **Forward** to go forward to a recent page.
-  **Home** to display the Internet Home screen.
-  Refresh to reload the current page.

## Viewing a Web Site

To view a web site:

- ▶ Tap the address field, enter the web address, and then tap **Go**.

To share, save, or print the current web page:

- ▶ Tap  **More options**.

To zoom in or out:

- ▶ Tap the screen twice or pinch the screen to zoom out and stretch the screen to zoom in.

## Browser Tabs

Use tabs to view multiple web pages at the same time.

To open a new tab:

- ▶ Tap  **More options** > **New tab**.

Tap a different tab to view it.

To close a tab:

- ▶ Tap  **Close**.

## Bookmarks

To bookmark the current web page:

- ▶ Tap  **Bookmark** > **Add**.

To open a bookmarked web page:

- ▶ Tap  **Bookmark** and tap an entry.

## History

To view a list of recently visited web pages:

- ▶ Tap  **Bookmark** > **History** tab.

## Saved Pages

To save a web page:

- ▶ Tap  **More options** > **Save page**.

To view a list of saved web pages:

- ▶ Tap  **Bookmark** > **Saved pages** tab.

## Sharing Pages

To share a web page address with others:

- ▶ Tap  **More options** > **Share via** and follow the prompts.

## Incognito Tabs

Pages viewed with incognito tabs do not appear within your browser history or search history, and leave no traces (such as cookies) on your device.

**Note:** Any downloaded files will remain on your device after you close the incognito tab.




To open a new incognito tab:

- ▶ Tap  **More options** > **New incognito tab**.

Incognito tabs display  **Incognito** on their tab.

 
## Internet Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.



# Music Player

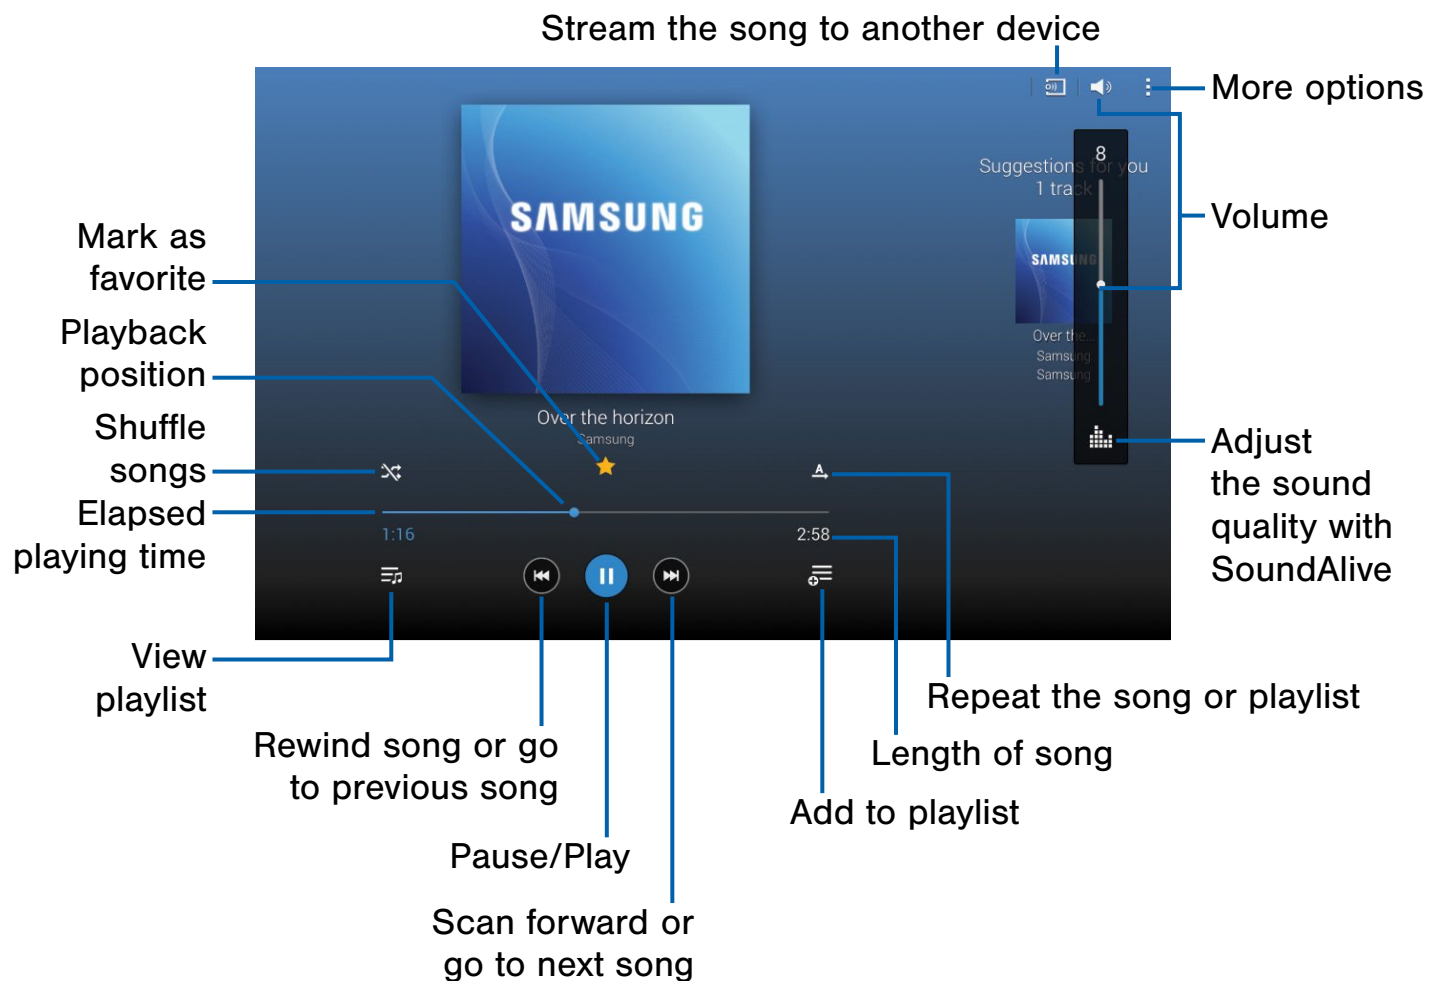

*Listen to your favorite songs with the Music app. Navigate through your music library, play songs, and create customized playlists.*

## Listen to Music

1. From a Home screen, tap **Apps** > **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.

# My Files



*Access files stored on your device, including images, videos, songs, and sound clips.*

## View Files


Files stored in the device are sorted into groups:

- **Timeline:** View files that are grouped by date.
- **FAVORITE FOLDERS:** View shortcuts to folders or FTP servers.
- **FOLDERS:** View files stored in the internal memory or a memory card.
- **CATEGORIES:** View files sorted by their types.
- **APPS:** View files stored or created in specific applications.


### To access My files:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Select a group, and then tap a file or folder to open it.

## Group Options

- ▶ After selecting a group, tap  **More options** for options:
  - **Select:** Select files or folders.
  - **Sort by:** Sort files or folders.
  - **Add FTP:** Add an FTP server shortcut in Favorite folders.
  - **Scan for nearby devices:** Search for devices that have media sharing activated.
  - **Display options:** Change the file manager settings.

## File Options

- ▶ Tap  **More options** > **Select**, select a file or folder, and then use one of these functions:



**Share via:** Send files to others or share them.



**Delete:** Delete files or folders.



**Move:** Move files or folders to another folder.







**Copy:** Copy files or folders to another folder.

Tap  **More options** for additional options:

- **Go to folder:** Go to the folder in which the file resides.
- **Rename:** Rename a file or folder.
- **Add to Favorite folders:** Add a shortcut to frequently-used folders in **Favorite folders**.
- **Add shortcut to home:** Add a shortcut to a file or folder to the Home screen.
- **Zip:** Create a Zip file of the selected items.
- **Details:** View file or folder details.


## Additional Functions

The following functions are available:

-  **Create folder:** Create a new folder.
-  **View:** Change the view mode.
-  **Storage usage:** View memory information for your device and memory card (not included).
-  **Search:** Search for a file or folder.

## Add Shortcuts to Folders

Add a shortcut to frequently-used folders in Favorite folders.



- ▶ Select a folder and tap  **More options >**  
**Add to Favorite folders.**

# S Voice

---

*Speak commands to perform operations on your device and speak criteria for searches and other operations.*




Use S Voice to find everything from directions to trivia answers to the current weather forecast.

1. From a Home screen, tap  **Apps** >  **S Voice**.
2. Speak a command.
3. Tap the microphone icon if the device does not hear you, or to give it another command.

**Tip:** Tap  **More options** for example commands and to view a tutorial.

## S Voice Settings

These settings allow you to modify settings associated with using S Voice.




1. From a Home screen, tap  **Apps** >  **S Voice**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Samsung Apps

 
---

*With Samsung Apps, you can download hundreds of applications from a variety of categories.*

**Note:** To use this feature to download applications, you must have a Samsung account.



1. From a Home screen, tap  **Apps** >  **Samsung Apps**.  
The Disclaimer screen displays.
2. Read the Terms and conditions and the Privacy policy and tap **Accept**.
3. Tap an application that you would like, then follow the onscreen instructions to download.
4. Tap  **More options** > **Help** for additional information.
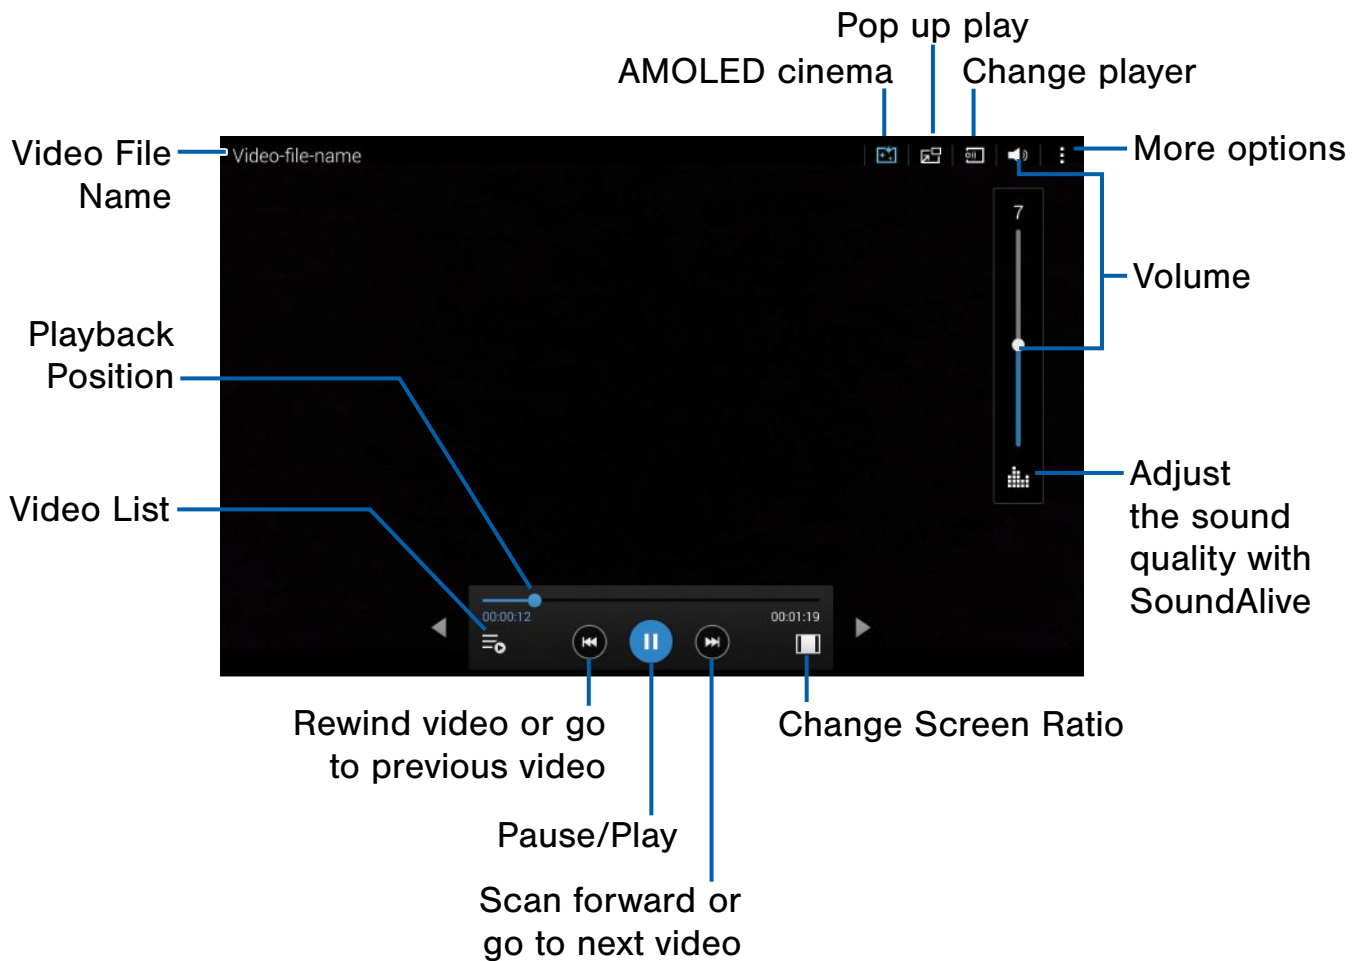
# Video






## *Play and manage videos stored on your device.*

### **To access Video:**

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

## *Use Pop-Up Play*

Multi task with Pop-Up Play—transform your video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  to continue playing the video in a floating window.
  - Drag the window to any location on the screen.
  - Use two fingers to pinch or spread to resize the floating window.

# WatchON



---

*WatchON turns your tablet into a remote control. Not only can you control your TV, set-top box, DVR and other devices from your tablet, but it will recommend great shows and movies based on your preferences and past viewing behavior.*

You can search, discover, explore, and access what's on live TV, and on-demand movies and TV shows across multiple video-on-demand providers.


**Note:** Before initiating use, verify you have an active Internet connection available (either mobile network or Wi-Fi connection).

## Set Up WatchON

1. From a Home screen, tap  **Apps** >  **WatchON**.
2. Tap **Set up WatchON**.
3. Follow the prompts to configure WatchON options, such as ZIP code, TV service provider, channel list setup, and so on.




**Note:** Tap  **More** > **Help** to learn more about WatchON.

## Configure Your Device as a Remote




1. From the WatchON tool bar, tap  **Remote Control**.
2. Tap **Setup** at the prompt.
3. Follow the instructions to find your TV or other devices and configure your phone to control their operation.

# Settings

*Configure your device's connections and settings, add accounts, and customize the Home screen, apps, and features.*

- Some options are enabled or disabled by tapping the **ON/OFF** button to turn the option  ON or  OFF.
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  checkbox. When enabled, a check mark displays. Tap the check mark to remove it and disable the option.

## Accessing Settings




1. From a Home screen, tap  **Apps** >  **Settings**.
2. From Home, drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

## Categories of Settings

- **Connections:** Control your device's wireless connections and location services.
- **Device:** Personalize your device, including sounds, the display, and accessibility.
- **General:** Create and modify your accounts (such as, Email, Google Account, Samsung Account, and so on). Access settings to configure Language and input and manage security, storage, and other features of the device.
- **Applications:** Access the Application manager, default applications, and settings for various apps.

## Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Setting search feature.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Search**.
  - Enter a word or words in the Search box. As you type, settings that match will appear on the screen.
  - Tap an entry to go to that setting.





# Wi-Fi and Wi-Fi Direct

*Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a Wireless Access Point (WAP).*



*Wi-Fi Direct creates a direct connection between two or more devices using Wi-Fi.*

## Turn Wi-Fi On or Off



Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on or off.

## Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. When Wi-Fi is first turned on, your device will automatically scan for available networks and display them.
4. Tap the network you want to connect to.
  - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.
  - To manually scan for networks, tap **Scan**.

## Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Add Wi-Fi network**.
4. Enter information about the Wi-Fi network:
  - Tap **Network SSID** to enter the name of the Wi-Fi network.
  - Tap the **Security** field and select a security option. This must match the current security setting on your target WAP. If secured, you will also need to enter your WAP's password.
  - Tap **Show advanced options**, if you need to add advanced options such as Proxy settings, IP settings, or Key management.
5. Tap **Connect** to store the new information and connect to your target WAP.

## Wi-Fi Status Indicators

These Status bar icons show your current Wi-Fi connection status:






Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



A Wi-Fi access point is available, but you are not connected to it. It may also display if there is a communication issue with the target Wireless Access Point (WAP).

## Wi-Fi Settings





The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Smart network switch** to automatically switch between Wi-Fi and mobile networks to maintain a stable Internet connection.
4. Tap  **More options** for options:
  - **Advanced:**
    - **Network notification:** Receive a notification when new Wireless Access Points (WAPs) are available.
    - **Passpoint:** Connect to passpoint-enabled Wi-Fi Access Points automatically. Tap to enable Passpoint. Tap Passpoint to see other available Passpoint-enabled Wi-Fi APs.
    - **Sort by:** Sort Wi-Fi networks by Alphabet or Signal strength.
    - **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
    - **Always allow scanning:** Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
    - **Install certificates:** Install authentication certificates.
    - **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
    - **IP address:** View your device's IP address (not configurable).

- **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
- **WPS PIN entry:** View the PIN used by your tablet to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).

## Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap  **More options** > **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices, or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.
  - Tap **Multi connect** to scan for devices that support multi connect. Select the devices and follow the prompts to establish the connections.
  - To rename your device (as seen by other devices), tap  **More options** > **Rename device**.

### Wi-Fi Direct Status Indicator



Displays when connected to another device using Wi-Fi Direct.



# Bluetooth

---

*Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth enabled computers, printers, and wireless devices.*




**Note:** The Bluetooth communication range is approximately 30 feet.

## Turn Bluetooth On and Off

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.




## Change Your Device's Name

Change the name others will use when pairing with your device via Bluetooth.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth** >  **More options** > **Rename device**.
3. Tap **Device name** and edit your device name.



## Making Your Device Visible to Other Bluetooth Devices

When you make your device visible, other Bluetooth can find it in a scan and initiate pairing. You can choose the length of time your device remains visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **Bluetooth** >  **More options** > **Visibility timeout**.
4. Select a time period for your device to remain visible after you turn on visibility.

## Scan for Bluetooth Devices



When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Tap **Scan** to search for visible external Bluetooth compatible devices such as headsets, devices, printers, and computers.

## Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.



Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **Scan**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your tablet then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

**Note:** Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.


## Disconnect a Paired Device

Disconnecting a paired device breaks the connection between the device and your device, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Tap the previously paired device.
4. Tap **OK** to confirm disconnection.




## Delete a Paired Device (Unpairing)

When you unpair from a Bluetooth device, the two devices will no longer recognize each other. To connect again, you'd need to pair the devices.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  next to the previously paired device, and then tap **Unpair** to delete the paired device.


## Review Files Received via Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth** >  **More options** > **Received files**.

## Bluetooth Status Indicators

These Status bar icons show your current Bluetooth connection status:



 Bluetooth is active.

# Airplane Mode

---

*Airplane mode disconnects your device from all networks and turns off connectivity features, such as Wi-Fi and Bluetooth.*

*While in airplane mode, you can use other features, such as playing music, watching videos, and other online applications.*

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Airplane mode**, and then tap **ON/OFF** to enable or disable the option.




**Note:** You can also control Airplane mode from the Device options menu. Press and hold the **Power/Lock** key, and then tap Airplane mode.

# Data Usage

---

## *Monitor your mobile data usage.*



**Note:** Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Data usage** for options:
  - **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
  - **Set mobile data limit:** Disable your mobile data connection when the specified limit is reached. Drag the red limit line to set the data usage limit.
  - **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
2. Tap  **More options** for options:
  - **Data roaming:** Enable data roaming on your device.
  - **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
  - **Auto sync data:** Set your accounts to automatically sync.
  - **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.
  - **Mobile hotspots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

# Location Services



*Some apps, such as Google maps, may require one or more location services be turned on for full functionality.*

## Locating Method

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Mode** to select how your location is determined:
  - **High accuracy:** Use GPS, Wi-Fi, and mobile networks.
  - **Power saving:** Use Wi-Fi and mobile networks (no GPS).
  - **GPS only:** Use GPS only.



## Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap an entry to view the app's settings.





## Location Reporting

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Google Location Reporting** for options:
  - **Location Reporting:** Allow Google apps to use your device's most recent location data.
  - **Location History:** Allow Google to store a history of your location data. Tap **DELETE LOCATION HISTORY** to permanently delete your location history.

## My Places

You can save your favorite locations for use with services that require location information. This information can improve your search results and other location-related activities.



1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **My places**.
4. Tap a category (Home, Work, or Car) to add a location:
  - Tap  **Add** to add additional categories.
  - Tap  **More options** > **Delete** to delete a custom category.

**Note:** Home, Work, and Car cannot be deleted.

# Mobile Networks

---

*Control your device's access to networks and mobile data service.*

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **Mobile networks** for options:
  - **Mobile data:** Allow your device to connect to a mobile data network.
  - **Data roaming:** Allow your device to connect to data services while roaming. Significantly higher charges may result.
  - **Access Point Names:** To use Wi-Fi you need access to a wireless access point (hotspot). Touch to display a list of the Access Point names. The active access point displays a green, filled circle to the right of the name.
  - **Network operators:** Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic. The current network connection displays at the bottom of the list.



**Tip:** You must deactivate data service prior to searching for an available network.

**Note:** Connecting to 3G networks slows the data transfer speed and time.

## *Default Setup Options*



Your device default is set to Automatic, which causes your tablet to automatically search for an available network.

To select a network each time you connect, set this option to Manual:

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **Mobile networks**.
2. Tap **Network operators**.
3. Tap **Default setup**.
4. Tap **Manual** to locate and connect to a network manually or touch Automatic to allow the device to automatically select a network.

## *AT&T MicroCell*

To search for an AT&T MicroCell:

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **Mobile networks**.
2. Tap **Network operators**.
3. Tap **Search for AT&T MicroCell**.

Your AT&T MicroCell must be installed and activated before you can connect to it.

For more information, visit [att.com/esupport](http://att.com/esupport).






# Virtual Private Networks (VPN)

---



## *Set up and manage your Virtual Private Networks (VPNs).*

**Note:** You must set a screen lock PIN or password before setting up a VPN. For more information, see [Lock Screen](#).



### Adding a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Tap  **Add** and follow the prompts to set up your VPN.

### Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Tap the VPN, enter your log in information, and tap **Connect**.



### Edit or Delete a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Touch and hold the VPN that you want to edit or delete.

# Ethernet Connections

---

*Manage your Ethernet connections.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks**.
2. Tap **Ethernet** and follow the prompts to connect to an Ethernet network.

# Nearby Devices

---

*Share your media files with nearby devices via Wi-Fi.*

**Warning:** If file sharing is enabled, other devices can access your data. Use this option with care.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Nearby devices**.
2. Tap **ON/OFF** to enable Nearby devices.

3. Set the following options:

- **Content to share:** Select the content to share. Choices are: Videos, Photos, and Music.
- **Allowed devices:** Indicate the devices accessible to your device.
- **Denied devices:** Indicate devices not allowed access to your device.
- **Download to:** Allow downloading of data to your device or optional memory card (not included).
- **Receive files from other phones:** Warn if a device attempts to upload data to your device

# Printing

---

*Print to Samsung and other printers (not included).*

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Printing**.
2. Tap a print service and follow the prompts.



**Note:** Tap **Download plug-in** to install additional print service drivers.

# Screen Mirroring

---

*Share your device's screen with another device.*

## **To enable Screen Mirroring:**

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Screen Mirroring**.
2. Tap **ON/OFF** to enable Screen Mirroring.  
Available devices are listed.

## **To find more devices:**

- ▶ Tap **Scan** to find more devices.

## **To connect:**

- ▶ Tap a device and follow the prompts.

# Sound Settings



---

*Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.*

## Change the Sound Mode

You can switch between sound modes, while preserving the individual sound settings you've made.



**Tip:** Sound modes are also available from the Device options menu. Press and hold the **Power/Lock** key, and then choose Mute, Vibrate, or Sound from the Device options.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Sound mode**, and then choose a mode:
  - **Sound:** Your device uses the sounds, vibrations, and volume levels you've chosen in Sound settings for notifications and alerts.
  - **Vibrate:** Your device vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
  - **Mute:** Your device plays no sounds or vibrations. Onscreen reminders will still occur.

## Adjust the Volume



Set the system volume level, and set default volume for notifications and other media.

**Tip:** You can also set System volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Volume**, and then drag the sliders to set the default volume for:
  - Music, video, games and other media
  - Notifications
  - System



## Set the Vibration Intensity

Set the level for vibration to accompany notifications and feedback for your screen touches, also known as haptic feedback.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Vibration intensity**, and then drag the sliders to set the vibration intensity for:
  - Notifications
  - Haptic feedback



## Change the Notification Sound

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Notifications**.
3. Tap a sound to preview it, and then tap **OK** to set it as your default notification sound.



## Play Tones When Touching or Tapping the Screen

Play tones when you touch or tap the screen to make selections.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Touch sounds** to enable.



## Set the Screen Lock Sound

Play a sound when you unlock the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Screen lock sound** to enable.



## Use Haptic Feedback

Set the device to vibrate when you tap the Menu and Recent apps keys, and for certain screen interactions.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Haptic feedback** to enable.



## Set Notification Sounds for Samsung Applications

Set your applications' notification sound settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** for options:
  - **Email:** Configure your email account notifications.
  - **Calendar:** Configure your event notifications.

## Set Samsung Keyboard Sounds

Set the keyboard sounds.



1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** for options:
  - **Sound when tapped:** Play a tone when you tap an onscreen key.
  - **Vibrate when tapped:** Vibrate when you tap an onscreen key.

# Display Settings

---



## Change the Font Style and Size

You can set the font style and size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Font** for options.
  - Tap **Font style** then tap a font or tap **Download** to find new fonts from the Google Play Store.
  - Tap **Font size** and select a font size.

## Adjust the Screen Brightness



Adjust the screen brightness to suit your surroundings, or to your personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Brightness** for options:
  - Tap **Automatic brightness** to allow the device to adjust brightness automatically.
  - To set a custom brightness level, clear the Automatic brightness check mark and then tap and drag the **Brightness level**.

**Note:** You can also control Brightness from the Notification panel. Drag down the Status bar at the top of the screen to find the Brightness options.



## Automatically Rotate the Screen

Use the front camera to rotate the screen based on the orientation of your face.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Screen rotation**
3. Tap **ON/OFF**, and then tap **Smart rotation** to enable.



## Smart Stay

Using the front camera to detect your face, the screen will not time out as long as you are facing the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Smart stay** to enable.

## Set the Screen Timeout Delay



Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Screen timeout**, and then choose a time period.





## Select a Screen Mode

Choose a screen mode to match your type of viewing. You can choose to have the device automatically adapt the display depending on the type of image being displayed, and other criteria such as battery level.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Screen mode**, and then choose a screen mode.
  - To have your device automatically optimize the display to match the type of image being displayed and other criteria, such as battery level, tap **Adaptive display**.
  - To choose a specify type of display, enable **AMOLED cinema**, **AMOLED photo**, or **Basic**.



## Reading Mode

Optimize the screen for reading from selected applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Reading mode**.
3. Tap **ON/OFF** to enable.
4. Tap **Edit** to select additional applications for use with Reading mode.







## Auto Adjust the Screen Tone

Your device will analyze the images displayed on the screen and automatically adjusts the brightness to conserve battery power.



 1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Auto adjust screen tone** to enable.



## Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included) or while charging. You can choose to display colors or display photos stored on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Daydream**.
3. Tap **ON/OFF** to turn Daydream on.
4. Configure options:
  - **Colors**: Tap the selector to display a changing screen of colors.
  - **Desk home screen**: Select items to display while the device is docked.
  - **Flipboard**: Display pictures from Flipboard. Tap  **Settings** for options.
  - **Google Photos**: Display pictures from your Google Photos account. Tap  **Settings** for options.
  - **Photo frame**: Display pictures in a photo frame. Tap  **Settings** for options.
  - **Photo table**: Display pictures in a photo table. Tap  **Settings** for options.
5. Tap **Preview** to see a demonstration of Daydream.



## Set the Touch Key Light Duration

Set the length of time the  **Recent apps key** and  **Back key** remain lit after you touch them.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Touch key light duration** to choose a timeout period.

## Increase the Touch Sensitivity of the Screen

Increase the sensitivity of the touch screen to improve results when wearing gloves.



1. From Home, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Increase touch sensitivity** to enable.

# Wallpaper

---

*Change the look of the home and lock screens with wallpaper.*

*You can display a favorite picture or choose from preloaded wallpapers.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Wallpaper**.
3. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Tap a image to preview it, and then tap **Set wallpaper**.
  - Tap **More images** for additional wallpapers.

For more information, see [Change the Wallpaper](#).

# Lock Screen

---

*Choose settings for unlocking your screen.*

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Lock screen**
3. Tap **Screen lock** to select a screen lock and level of security:
  - **Swipe:** Swipe the screen to unlock it. This option provides no security.
  - **Pattern:** A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
  - **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.
  - **Password:** Create a password for unlocking the screen. This option provides high security.
  - **Fingerprint:** Use fingerprint recognition to unlock the screen. This option provides medium to high security.
  - **None:** Never use a Lock screen.

## Swipe Options

These options are available when Swipe is selected:

- **Lock screen card:** Display up-to-date information on your lock screen.
- **Clock widget options:** Set the size of the Clock widget that is displayed on your Home screens, and whether to show the date.
- **Shortcuts:** Set shortcuts to appear at the bottom of the Lock screen. Touch the ON/OFF button to turn it ON.
- **Owner Information:** Show owner information on the Lock screen.
- **Unlock effect:** Set the visual effect used when unlocking the screen.
- **Help text:** Show help information on unlocking the screen on the Lock screen.

## Pattern Options

These options are available when Pattern is selected:

- **Lock screen card:** Display up-to-date information on your lock screen.
- **Pattern type:** Select a pattern type.
- **Clock widget options:** Set the size of the Clock widget that is displayed on your Home screens and whether to show the date.
- **Owner Information:** Show owner information on the Lock screen.
- **Make pattern visible:** See the pattern as you draw it.
- **Vibration feedback:** Vibrate the tablet when the unlock pattern is entered incorrectly.
- **Secured lock time:** Set a time-out for lock screen.

## PIN, Password, or Fingerprint Options

These options are available when Fingerprint, PIN, or Password is selected:



- **Lock screen card:** Display up-to-date information on your lock screen.
- **Clock widget options:** Set the size of the Clock widget that is displayed on your Home screens, and whether to show the date.
- **Owner Information:** Show owner information on the Lock screen.
- **Secured lock time:** Set a time-out for lock screen.

# Multi Window

---

*Turn on the Multi window feature.*

For more information, see [Using Multi Window](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **ON/OFF** to enable.
3. Tap **Multi window** for options.
  - Tap **Open in multi window view** to automatically view content in a multi window when you open files from My Files or Video, or attachments from email.



# Notification Panel

---



*Customize which Quick setting buttons appear on the Notification Panel.*


*You can also customize which apps appear on the Recommended applications menu on the Notification Panel when you perform certain actions, such as plugging in earphones.*

For more information, see [Notification Panel](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Notification panel**.

– or –




From the Notification panel, tap  **View all** >  **Edit**.

2. Tap **Notification panel** for options:
  - Tap **Brightness and volume** to be able to adjust the screen brightness and volume from the Notification Panel.
  - Tap **Recommended applications** to show selected apps on the Notification Panel after certain actions, such as connecting earphones. Tap **ON/OFF** to turn the feature on.
  - To customize which quick setting buttons appear at the top of the Notification Panel, tap and drag buttons to reorder them.
  - Tap  **Reset** to use the default layout.

## Recommended Applications

When you perform certain actions, such as plugging in earphones, the Notification panel can display shortcut to your favorite related apps, such as Music Player or Google Play Music.

To customize which shortcuts appear on the Recommended apps menu:



1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Notification panel**.
2. Tap **Recommended applications**.
3. Tap **ON/OFF** to turn the feature on.
4. Tap  **Edit** and choose a maximum of five apps to display on the Notification Panel when you insert earphones.


# Toolbox

---


*The Toolbox is a floating shortcut menu that displays on every screen, giving you quick access to your favorite apps.*

## To activate the Toolbox:

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Toolbox**.
3. Tap **ON/OFF** to enable the feature.

When activated, the onscreen button  displays on the current screen.

## To customize the Toolbox applications:

1. From the active Toolbox screen, tap  **Edit** to select which apps to include in the **Toolbox**.  
  
Some default apps are selected.
2. Tap **Done** when you are finished making your selections.



**Note:** A maximum of five apps can be selected at one time. Just uncheck and reselect to customize the Toolbox to your needs.



# Motions

---

*Control certain device actions by touching the screen with the palm of your hand.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Motions**.
3. Tap **ON/OFF** to enable each of the following:
  - **Mute/pause:** Mute or pause sounds and video by covering the screen or turning over the device.
  - **Palm swipe to capture:** Capture an image of the screen when you sweep your hand left or right across the screen.

# Accessibility

---

*Accessibility services are special features that make using the device easier for those with certain physical disabilities.*

**Note:** You can download additional accessibility applications from the Google Play Store.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Accessibility** for options:

## Vision

- **TalkBack:** Speak feedback aloud to help blind and low-vision users.

**Caution:** TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

- **Dark screen:** Keep the screen turned off at all times for privacy.
- **Rapid key input:** Release your finger to enter selection instead of double tapping.
- **Speak passwords:** Read the characters aloud as you enter your passwords.
- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Notification reminder:** Play a beep when a notification has been missed.

- **Negative colors:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap **Color adjustment** for options.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Tap to turn the feature on.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [Text-To-Speech Options](#).

## Hearing

- **Flash notification:** Set your camera light to blink whenever you receive a notification.
- **Turn off all sounds:** Turn off all sounds including receiver voice.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available. Tap Samsung subtitles (CC) for options.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap Google subtitles (CC) for options.
- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.

## Dexterity and Interaction

- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Press and hold delay:** Select a time interval for this tap gesture.
- **Interaction control:** Enable motions and screen timeout. You can also block areas of the screen from tap interaction.

## More Settings

- **Direct Access:** Open your accessibility settings by pressing the Home Key three times in quick succession.
- **Single tap mode:** Tap to stop/snooze alarms and calendar events.
- **Manage accessibility:** Export your accessibility settings and share them with another device.



## Services


Additional accessibility apps may be downloaded from the Google Play Store. Certain accessibility services you install may be configured here.

# Blocking Mode

---

*Turn off notifications for selected features.*

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Blocking mode**.
3. Tap **ON/OFF** to turn the feature on.
4. Configure options:
  - Tap **Turn off notifications** to block all notifications.
  - Tap **Turn off alarm** to block all alarms.
  - The Set time option allows you to set Blocking mode for a specific time range or always.
    - Tap the **Always** field to disable it and configure the **From** and **To** time fields.

**Note:** When Blocking Mode is enabled,  displays in the Status Bar.

# Users

---



*Share this tablet with multiple people by creating User accounts.*

*Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust tablet settings like Wi-Fi which affect everyone.*




*Restricted profiles allow only limited access to apps and content.*

## Set Up User Profiles

Set up user profiles and then select one when unlocking the device to use personalized settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Users**. Follow the onscreen instructions to set up a new user profile.

## Deleting a User or Profile

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Users**.
3. Tap  **Delete** next to a User profile to delete it.

**Note:** Only the Device Owner can delete other User accounts.

## Use User Profiles

To access the device with a user profile, select a profile at the top right of the locked screen.



You can also switch between users by sliding down the Notification Panel and tapping the current User.

## Change User Account Nicknames and Photo IDs

The photo and name each user uses in their personal Contact entry (listed under ME at the top of their Contacts list) is used as their User ID and name.

To change their ID photo and name, each user can edit their personal Contact entry. For more information, see [Edit a Contact](#).

# Private Mode



---

*Hide personal content from being accessed by anyone else using your device.*

*Private mode is only available for certain applications.*

**Note:** A secure screen lock (Pattern, PIN, Fingerprint, or Password) is required to use Private Mode.

## Set Up Private Mode

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **ON/OFF** to turn Private mode on.
3. Tap **Private mode**.
4. Follow the prompts to learn about and set up Private mode.

# Finger Scanner






---

*Use fingerprint recognition as an alternative to entering passwords in certain apps.*



*You can also use your fingerprint to verify your identity when logging in to your Samsung account.*

## Register a Fingerprint



You can register up to 3 fingerprints. A password will also set up as an alternative to your fingerprint.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Finger Scanner** > **Fingerprint manager**.
  - To add a fingerprint, tap  and follow the instructions to register a fingerprint and password.
  - To rename a fingerprint, touch and hold the fingerprint, and then touch .
  - To delete a fingerprint, touch and hold the fingerprint, and then touch .

## Change Your Alternative Password

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Finger Scanner** > **Change alternative password**.
3. Enter your fingerprint or password.

## Additional Settings

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Finger Scanner** for options:
  - **Screen lock:** Change your Screen lock and access Screen lock settings. For more information, see [Lock Screen](#).
  - **Verify Samsung account:** Verify your identity using your fingerprint when logging in to your Samsung account.
  - **Pay with PayPal:** Link your PayPal account to your device to make faster and more secure PayPal payments using any of your registered fingerprints.




# Accounts

---




*Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.*

*Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.*




## Add an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** >  **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

## Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > (Account Type).
3. Tap an account to view the sync settings for that account.
  - Check individual data items to sync.
  - Tap  **Sync now** to synchronize the account.

## Delete an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > (Account Type).
3. Tap the account and then tap  **Delete**.





# Backup and Reset

---

*Back up your data to Google servers. You can also reset your device to its factory defaults.*

## Backup and Restore



Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Backup and reset** for options:
  - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
  - **Backup account:** Select a Google account to be used as your backup account.
  - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

## Factory Data Reset

Return your device to its factory defaults.

**Warning:** This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Backup and reset** > **Factory data reset**.
3. Tap **Reset device** and follow the prompts to perform the reset.

# Language and Input Settings

---

*Configure your device's language and input settings.*

## Set Your Default Language




1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.

## Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input** > **Default**.
3. Select a keyboard.




**Note:** Additional keyboards can be downloaded from the [Google Play Store](#).

## Samsung Keyboard Settings

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input**.
3. Tap  next to Samsung keyboard for options:
  - **Select input languages:** Choose which languages are available on the keyboard. To switch between languages, slide the space bar sideways.
  - **Predictive text:** Allow Predictive text to suggest words matching your text entries, and, optionally, complete common words automatically. Predictive text can learn your personal writing style from your Contacts, Gmail, and social networking sites—improving its accuracy of predicting your text entries.
  - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.




## Swype Keyboard Settings

Configure options for using the Swype keyboard.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input**.
3. Tap  next to Swype for options:
  - **Settings:** Configure basic options.
  - **Themes:** Change the keyboard layout.
  - **My Words:** Manage your personal dictionary, new word updates, as well as how Swype can learn from your writing style in various apps.
  - **Languages:** Set the current language. Additional languages can be downloaded.
  - **Gestures:** Learn about using Swype gestures.
  - **Help:** View information on using Swype.


## Google Voice Typing Settings



Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input**.
3. Tap the check box next to **Google voice typing** to enable it.
4. Tap  next to Google voice typing for options:
  - **Choose input languages:** Select languages for Google voice typing.
  - **Block offensive words:** Hide words many people find offensive in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
  - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.

## Voice Search




Use Google voice recognition to perform Google searches.

To perform a voice search, tap  in the Google search bar or widget. Or say “Ok Google” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input** > **Voice search** for options.



## Text-To-Speech Options

Configure your text-to-speech options.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input** > **Text-to-speech** for options:
  - Select between the Samsung and Google text-to-speech engines. Tap  next to each TTS engine for options.
  - **Speech rate:** Set the speed at which the text is spoken.
  - **Listen to an example:** Play a sample of speech synthesis (available if voice data is installed).
  - **Default language status:** Display the default language in use.

## Mouse/Trackpad Settings

Configure settings for using an optional mouse or trackpad (not included).



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Language and input** for options:
  - **Mouseover:** Show more information when you move the pointer over items on the screen.
    - **Preview and icon labels:** Show previews, progress information, speed dial information and icon labels.
    - **List scrolling:** Scroll down or up lists by holding the mouse pointer over the edge of the screen.
  - **Pointer speed:** Set the speed of the pointer.

# Date and Time Settings

---

*By default, your device receives date and time information from the wireless network.*



*When you are outside network coverage, you may want to set date and time information manually using the date and time settings.*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Date and time**.
3. Set the date, time, time zone, time format, and date format.

# Accessories

---




*Configure options when listening to HDMI audio or using a book cover (not included).*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accessories** for options:
  - **Audio output:** Select a sound output format to use when connecting your device to optional HDMI devices (not included). Some devices may not support the surround sound setting.
  - **Automatic unlock:** Flip the cover open to unlock the screen when secure lock is turned off.

# Battery

---

*View how battery power is used for device activities.*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Battery** for options:
  - **Show battery percentage:** Display the battery charge percentage next to the battery icon on the Status bar.
  - **Battery Chart:** The battery level displays as a percentage. The amount of time the battery has been used also displays.
  - **Apps and OS Usage:** Battery usage displays in percentages per application.
    - Tap **Screen**, **Android System**, **Android OS**, or an app to view they are affecting battery use.
  - Tap  **Refresh** to update the listing.




**Note:** Other applications may be running that affect battery use.

# Power Saving

---

*Conserve battery power by automatically adjusting the screen brightness, limiting the performance of the CPU, and other power reduction activities.*

*Ultra power saving mode saves even more battery power by using a gray scale theme to your home screen and limiting the number of usable apps.*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
  2. Tap **Power saving** for options:
    - **Power saving mode:** Tap **ON/OFF** to turn the feature on. Tap **Power saving mode** to select options.
    - **Ultra power saving mode:** Tap **ON/OFF** to turn the feature on. Tap **Ultra power saving mode** for options.
- Touch  **More options** > **Turn off Ultra power saving mode** to turn the option off.





# Storage


*View the device memory and usage, or mount, unmount, or format an optional memory card (not included).*

## Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage**.
  - The Device memory displays as Total space, Available space, and so on.
  - Tap Used space to view the amount of memory used by applications, pictures and videos, audio, and downloads.

### To increase available memory:

 
1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **Select all**), and then tap  **Delete**.

## Memory Card (SD Card)

Once a memory card has been installed in your device, the card memory displays as Total space and Available space.

### *Install a Memory Card*

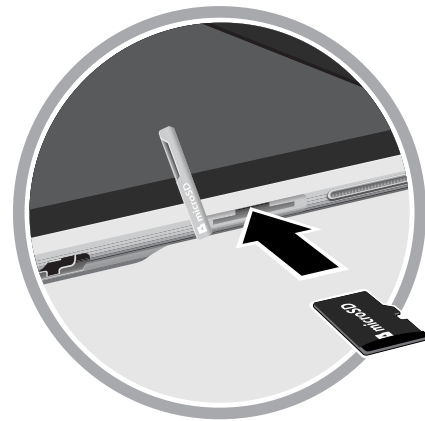

You can use a microSD or microSDHC card (not included) to add additional memory space to your device.



1. Open the memory card slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Close the memory card slot cover.

## Mount a Memory Card



When you install a memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage**.

## Unmount an SD Card



To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Unmounting an SD card may stop some applications from functioning until you mount the SD card again.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Tap Unmount SD card**.

## Remove a Memory Card

**Warning:** To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Tap Unmount SD card**.
3. Open the memory card slot cover and turn to expose the slot.
4. Gently press inward on the memory card so that it pops out from the slot, and carefully pull the card out.
5. Close the memory card slot cover.

## Formatting an SD Card

**Warning:** When formatting an SD card, back up your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Format SD card** and follow the prompts.



# Security

---

*Secure your device and protect your data with Security settings.*

## Encrypt Your Data

Require a numeric PIN or password to decrypt your tablet each time you power it on or encrypt the data on a memory card (not included) each time it is connected.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
  - Tap **Encrypt device** and follow the prompts to encrypt all data on your device.
  - Tap **Encrypt external SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

**Note:** Make sure your battery is charged more than 80 percent. Encryption takes an hour or more.

## Locate a Lost Device

Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely.

**Note:** You must sign up for a Samsung account and enable Google location service to use Remote controls.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Remote controls** and follow the prompts to set up Remote controls.
3. Tap **SIM change alert** to set up an alert when a different, unregistered SIM is activated on the device.
4. Tap **Go to website** to manage your Find My Mobile account.
5. To prevent your tablet from being reactivated after being reset, touch **Reactivation lock**.

### *Finding Your Tablet*

To access your device remotely, visit [findmymobile.samsung.com](http://findmymobile.samsung.com).

## Set Up or Change Password



Use this option to set up your password when one is first required or change your current password.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Set up/change password**.
3. Enter a new password and touch **Confirm**.
4. Enter the new password again and touch **Confirm**.

## Set Up SIM Card Lock

To prevent another person from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card, you can protect the information by using a PIN code.

When enabled, your tablet asks for a PIN number each time you use the tablet. Using this option you can also change your SIM PIN number.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Set up SIM card lock**.
3. Touch **Lock SIM card**, enter your SIM PIN code, then touch **OK**.



**Note:** You must activate **Lock SIM card** before you can change your SIM PIN code.

### To change your SIM PIN code:

1. Touch **Change SIM PIN**.
2. Enter your old SIM PIN code and touch **OK**.
3. Enter your new SIM PIN code and touch **OK**.
4. Re-type your new SIM PIN code and touch **OK**.



## View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Make passwords visible** to turn the feature on.

## Device Administration



Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
  - **Device administrators:** Add or remove device administrators.
  - **Unknown sources:** Enable installation of non-Google Play applications.
  - **Verify apps:** Block or warn before installing apps that may cause harm.

**Warning:** Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.



## Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
  - **Security policy updates:** Automatically or manually check for security policy updates.
  - **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.

# Credential Storage



Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
  - **Storage type:** Select a storage location for credential contents.
  - **Trusted credentials:** Display certificates in your device's ROM and other certificates you have installed.
  - **Install from device storage:** Install a new certificate from storage.
  - **Clear credentials:** Erase the credential contents from the device and reset the password.

# About Your Device



---

*View information about your device, including status, legal information, hardware and software versions, and a tutorial.*

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **About device**, and then tap items for more details:
  - **Software update:** Update your tablet software, if available.
  - **Status:** View the status of the battery, network, and other information.
  - **Legal information:** Display open source licenses, Google legal information, Samsung legal information, Safety information, and Privacy alert.
  - **Report diagnostic info:** Give consent to provide diagnostic and usage data to Samsung to help improve the quality and performance of its products and services.
  - **Device name:** View and change the name of your device.
  - Additional device information includes the Model number, Android version, Baseline version, Kernel version, Build number, and SE for Android status.

## Software Update

Use Software update to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **About device** > **Software update**.
3. Touch **Check for updates**.
4. At the **AT&T Software update** prompt, touch **OK** to continue.
5. The tablet automatically updates the software (if available), otherwise, when the **Current software is up to date** prompt displays, touch **OK**.

When updating software, once the update file is downloaded, you can delay the update on the start screen by postponing it for a certain period of time. If you want to resume the update before the selected time, touch **Continue update**.

# Applications

*Access the Application manager, default applications, and settings for various apps.*



## Application Manager

You can download and install applications from Google Play Store or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

**Note:** Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

### Memory Usage





See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab > **Application manager**.
2. Tap **DOWNLOADED**, **SD CARD**, **RUNNING**, or **ALL** to display memory usage for that category of applications.

The graph at the bottom of the **DOWNLOADED** tab shows used and free device memory. The graph at the bottom of the **RUNNING** tab shows used and free RAM.





### Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
3. To switch the order of the **DOWNLOADED** list, tap  **More options** > **Sort by size** or **Sort by name**.
4. To reset all of your application preferences, tap  **More options** > **Reset app preferences**.
5. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

### SD Card

Displays apps you have downloaded onto your memory card (not included).


1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab > **Application manager**.
2. Tap **SD CARD** to view a list of all the downloaded applications on your device.
3. To switch the order of the **SD CARD** list, tap  **More options** > **Sort by size** or **Sort by name**.
4. To reset your application preferences, tap  **More options** > **Reset app preferences**.

**Note:** When you reset app preferences, you will not lose any app data.

5. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

## Running Services

View and control services running on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab > **Application manager**.

2. Tap the **RUNNING** tab.

All the applications that are currently running on the device display.

3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.

4. Tap one of the applications to view application information.

- **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application.

**Warning:** Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.)

- **Report:** Report failure and other application information.

**Note:** Options vary by application.





# Default Applications

---

*If you have multiple applications of the same type, such as email apps, you can select one app to be the default.*

*You can also use a simpler Home screen which provides an easier user experience for first-time tablet users.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab > **Default Applications**.
2. Tap an app to set it as the default application.  
– or –  
Tap an app to remove it as the default application.
3. To clear defaults that you have set up, touch **Clear**.

# Applications Settings Shortcuts

---

*Shortcuts to the settings for various apps are available in one convenient location.*

To quickly access the settings for Contacts, Email, Gallery, Internet, Calendar, or S Voice:

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** tab.
2. Tap one of the following to display the settings for the selected app:
  - **Contacts:** For more information, see [Contact Settings](#).
  - **Email:** For more information, see [Email Settings](#).
  - **Gallery:** For more information, see [Gallery Settings](#).
  - **Internet:** For more information, see [Internet Settings](#).
  - **Calendar:** For more information, see [Calendar Settings](#).
  - **S Voice:** For more information, see [S Voice Settings](#).